

# SEW


## SAFETY VOLTAGE DETECTOR ( Rechargeable Battery Type )

IP65



### FEATURES

- Protection class: IP65
- Bright LED visual indication
- Audible indication
- Non-contact voltage detection:  
220Vac ~ 132kVac
- Wide angle voltage detection
- Frequency range: 40 ~ 70Hz
- Easy-to-prove method
- Self-test function
- Power source: 9V rechargeable battery
- Non-contact detection by proximity
- Flashlight function
- Operating temperature: 0°C~50°C
- Humidity: 80% RH Max
- Lightweight, robust and compact
- Comply with EN IEC 61326-1

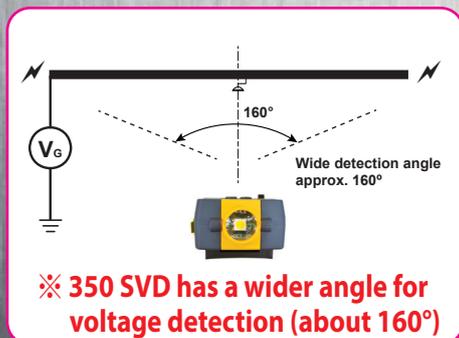


Attached the detector on your arm with the elastic cord for voltage detection.

STANDARD ELECTRIC WORKS CO., LTD.  
www.sew.com.tw

5F., NO.105, JHONGCHENG RD., TUCHENG DIST.,  
NEW TAIPEI CITY 23674, TAIWAN (R.O.C.)  
TEL: 886-2-22681528  
FAX: 886-2-22681529  
e-mail: sales@sew.com.tw

Model  
**350 SVD**

## INSTRUMENT LAYOUT

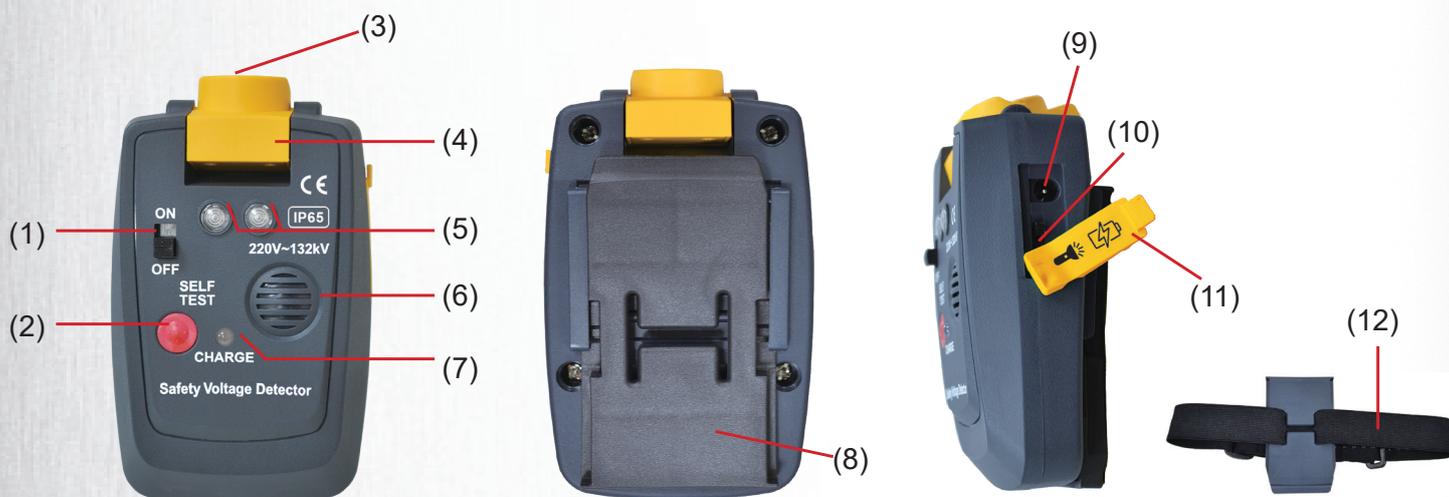

- (1) ON/OFF switch
- (2) SELF TEST button
- (3) Flashlight
- (4) Rotatable part for flashlight  
3 different angles can be set by rotating this part.
- (5) Visual alert LEDs
- (6) Buzzer  
High noise level buzzer triggered on voltage detection.
- (7) CHARGE LED
  - When this LED glows "red", which means the detector is under charging
  - When this LED glows "green", which means the charging process is complete. The 9V rechargeable battery is fully charged.
- (8) Bracket
- (9) Battery-charge socket  
For AC adapter connection.
- (10) Flashlight switch  
Switch to the upper position to turn on the flashlight.  
Switch to the lower position to turn off the flashlight.
- (11) Protection cover  
For flashlight switch and battery-charge socket.
- (12) Elastic cord  
For attached into the bracket

## SPECIFICATIONS

AC Voltage detection	220Vac ~ 132kVac
Frequency range	40 ~ 70Hz
Operating temperature and humidity	0°C ~ 50°C / 80% R.H. Max.
Dimensions	110(L) × 68(W) × 35(D)mm
Weight (battery included)	Approx. 137g
Power source	9V Rechargeable battery
Safety standard	EN IEC 61326-1
Accessories	Instruction manual AC adapter Elastic cord Bracket Carry case Tape (2 pcs)

