



## Features & Options

- Field Selectable Particulate Size of PM1.0, PM2.5 and PM10
- Field Selectable Outputs of 0 to 5V, 0 to 10V and 4 to 20mA
- Laser-based, light scattering particle sensing with 10 year expected lifetime.

The BAPI-Stat “Quantum” Particulate Sensor is an accurate and reliable way of continuously monitoring the concentration of particles in a room. Laser-based sensors provide the highest accuracy for commercial applications and will measure particle concentrations from 0 to 1,000  $\mu\text{g}/\text{m}^3$ . A 60mm mounting base is available to fit European style junction boxes.



**BAPI-Stat “Quantum”  
Particulate Sensors**  
(Right unit shown with 60mm  
mounting base)

**5  
YEAR  
WARRANTY**

## ORDERING INFORMATION

**BA/CQX**.....Particulate Sensor, Standard Mounting Base

**BA/CQX60**.....Particulate Sensor, 60mm Mounting Base

## Specifications

**Power:** (Half-wave rectified)  
7 to 40 VDC (4 to 20mA Output)  
7 to 40 VDC or 12 to 28 VAC (0 to 5 VDC Output)  
15 to 40 VDC or 15 to 28 VAC (0 to 10 VDC Output)

**Power Consumption:**  
75 mA Max @ 24 VDC • 3 VA Max @ 24 VAC

**Load Resistance:** VDC Output 4K Ohms Min

**Sensing Element:** Laser-based, Light Scattering

**Sensor Element Life:** 10 Years Typical

**Concentration Range:** 0 to 1,000  $\mu\text{g}/\text{m}^3$

**Accuracy at 77°F (25°C):**

	0 to 100 $\mu\text{g}/\text{m}^3$	100 to 1,000 $\mu\text{g}/\text{m}^3$
PM1.0	$\pm 25 \mu\text{g}/\text{m}^3$	$\pm 25\%$ of reading
PM2.5	$\pm 15 \mu\text{g}/\text{m}^3$	$\pm 15\%$ of reading
PM10	$\pm 25 \mu\text{g}/\text{m}^3$	$\pm 25\%$ of reading

**Response Time:** <6 Seconds

**Wiring:** 3 Wires, 16 to 22 AWG

**Environmental Operating Range:**

-4 to 158°F (-20 to 70°C)


0 to 95%RH Non-condensing

**Enclosure Material:** ABS Plastic, UL94 V-0


**Mounting:**

Standard 2"x4" Junction Box, European Junction Box or Drywall Mount (screws provided)

**Agency:** CE EN 61326-1:2013 EMC, UL94 V-0, RoHS

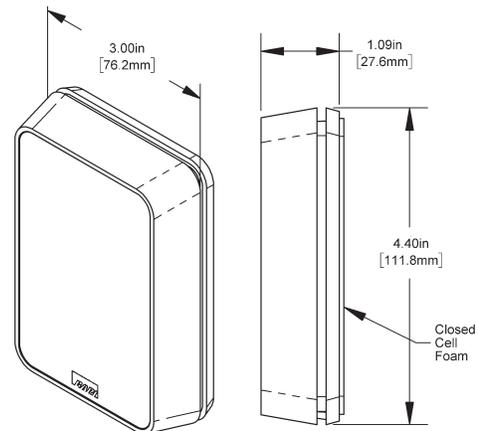

**Unit with Standard Mounting Base**

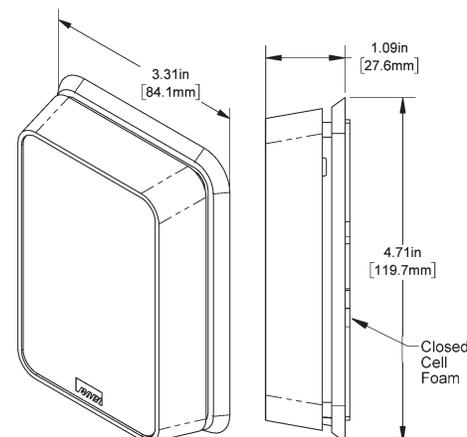

**Unit with 60mm Mounting Base**

