



# KIWIFRUIT QUALITY M E T E R

- *Accurately measure dry matter & Brix.*
- *Ascertain harvest and incoming fruit quality instantly.*
- *Easy, out-of-the-box operation.*

The F-751 Kiwifruit Quality Meter accurately and non-destructively measures dry matter and Brix, the kiwifruit's key quality and ripeness metrics. Using near infrared (NIR) technology, the F-751 takes measurements in seconds, enabling kiwifruit growers, distributors, and retailers to rapidly gather data without destroying product. **Trusted by thousands of universities**, research institutes and commercial producers worldwide, Felix Instruments now brings the power of NIR technology to the kiwifruit industry.

**Measurement Ranges:** 6-25% dry matter, 1-20° Brix

**Varieties:** Green, gold & red

## FRUITMAPS




FOR NEWS AND UPDATES VISIT  
WWW.FELIXINSTRUMENTS.COM



# SPECIFICATIONS


<b>Spectrometer</b>	Hamamatsu C11708MA	<b>PC Interface</b>	Wi-Fi
<b>Range</b>	640-1050 nm	<b>Data Recorded</b>	Raw data, reflectance, absorbance, 1 <sup>st</sup> derivative, 2 <sup>nd</sup> derivative, GPS, date, time
<b>Spectral Sample Size</b>	2.3 nm	<b>Measurement</b>	Dry matter, Brix & internal color (gold & red)
<b>Spectral Resolution</b>	20 nm (FWHM) maximum	<b>Power Source</b>	Removable 3400 milliamp hour lithium-ion batteries
<b>Light Source</b>	Halogen Tungsten Lamp	<b>Battery Life</b>	500+ measurements
<b>Lens</b>	Fused silica coated to enhance NIR	<b>Body</b>	Heavy-duty aluminum body
<b>Shutter</b>	White painted reference standard	<b>Dimensions</b>	7.1" x 4.75"W, 1.75" thick
<b>Display</b>	Sunlight visible LCD screen w/ backlight	<b>Weight</b>	1.05 kg

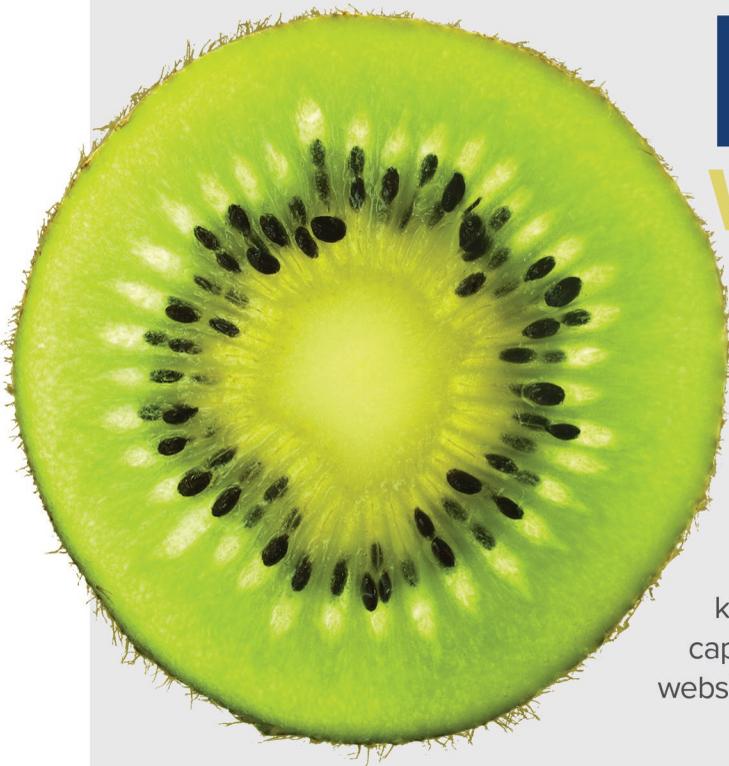

## THE POWER TO PREDICT WITH FRUITMAPS®

Paired with the free application, Fruitmaps®, the F-751 Kiwifruit Quality Meter is a game-changer for the kiwi industry. Using a wi-fi connection, gathered data can be seamlessly uploaded to the cloud giving kiwifruit growers the power to visualize their entire crop's maturity and forecast harvest timing more accurately than ever before. In addition, the device gives QA professionals the ability to assess kiwi quality while in storage, and, retail outlets the capacity to accurately inspect incoming product. Visit our website to learn more at [www.felixinstruments.com](http://www.felixinstruments.com).

FRUITMAPS 

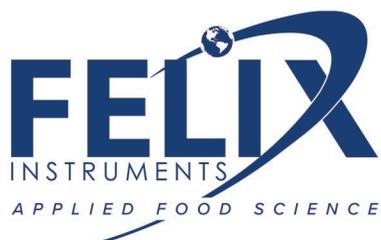

[www.felixinstruments.com](http://www.felixinstruments.com)



[sales@felixinstruments.com](mailto:sales@felixinstruments.com)



(360) 833-8835

