



D_N series

The D_N series comprises a range of high-performance clamp-on AC current probes designed for high current measurements.

Their excellent current transformation ratios and low phase shift, combined with a broad frequency response, allows highly accurate current and power measurements.

High-quality magnetic cores and windings mean high-precision current measurement up to 3000 A (AC).

The rectangular jaws can be used to clamp large-diameter cables or busbars.


The D_N series clamps provide true RMS measurement values and faithful signal reproduction.

There are two different kinds of model available in the D series: the first acts as a traditional current transformer with a current output (mA) and has a wide range of voltage ratios.

These clamps may also be used with multimeters, harmonic and power measurement equipment, logging apparatus or other instruments allowing AC current input.

The second type of model gives a voltage output in precise proportion to the measured current (1 mV/A, 10 mV/A or 100 mV/A) so you can display and log currents on instruments without current inputs.

Model D38N has been specifically designed for use with oscilloscopes, or other instruments with a BNC input.

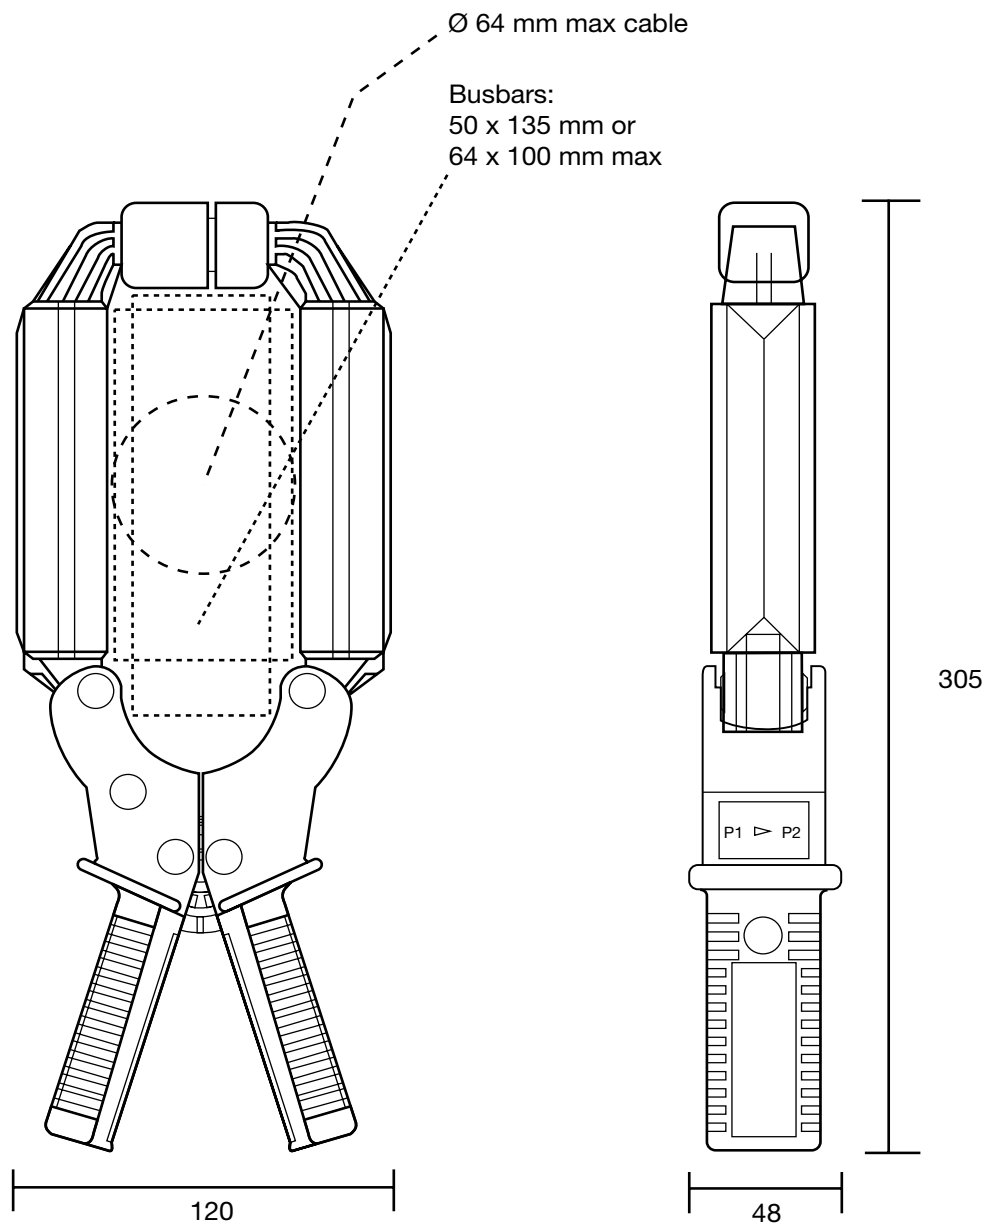

Current clamps for AC current

Models D30N and D30CN

D_N series

Current	2400 A AC
Ratio	3000:1
Output	0.333 mA/A

Electrical specifications

Current calibre:

1 A AC ... 2400 A AC
(3000 A for temperature < 35 °C)

Current transformation ratio:

3000:1

Output signal:

0.333 mA/A AC (1 A for 3000 A)

Accuracy and phase shift ⁽¹⁾:

Primary current	150 A	600 A	3000 A
% Accuracy of output signal	1.5 %	0.75 %	0.5 %
Phase shift	1.5°	0.75°	0.5°

Overload:

3600 A for 5 minutes

Maximum output voltage

(secondary open):

Electronic protection limiting the voltage to 42 V peak max.

Accuracy:

In accordance with IEC 185-26-27, 5 VA, class 0.5 from 48 Hz to 1000 Hz

Bandwidth:

30 Hz to 5 kHz (in continuous use above 1 kHz, the max. measurement current is limited)

Ampere second product:

90 A.s

Load impedance:

< 5 Ω

Operating voltage:

600 V AC

Common mode voltage:

600 V AC

Influence of adjacent conductor:

0.005 A/A AC

Influence of conductor position in jaws:

1 % ± 0.1 A

Mechanical specifications

Operating temperature:

-10 °C to +50 °C

Storage temperature:

-25 °C to +80 °C

Influence of temperature:

< 0.1 % per 10°K

Max. jaw opening:

90 mm

Max. jaw insertion capacity:

Cable: 64 mm

Group of wires: 50 x 135 mm - 64 x 100 mm

Casing protection rating:

IP20 in accordance with IEC 529

Drop test:

500 mm (IEC 68-2-32)

Shock resistance:

100 g, in accordance with IEC 68-2-27

Vibration resistance:

10/55/10Hz, 0.15 mm test in accordance with IEC 68-2-6

Self-extinguishing capability:

Casing: UL94 V0

Jaws: UL94 V2

Dimensions:

120 x 315 x 48 mm

Weight:

1200 g


Colour:

Dark grey casing with red jaws

Output:

■ D30N: two safety sockets (4 mm)

■ D30CN: two-wire 1.5 m cable with reinforced insulation or double insulation ending with 2 elbowed 4 mm male safety plugs

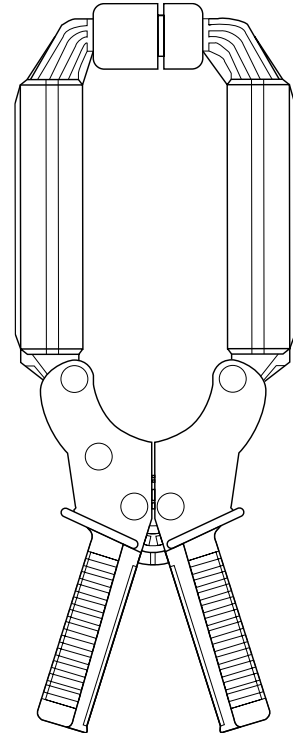

Safety specifications

Electrical safety:

Double insulation or reinforced insulation between the primary and the secondary circuits and the outside casing in accordance with IEC 1010-2-032.

- 600 V category III, pollution degree 2
- 300 V category IV, pollution degree 2

Electromagnetic compatibility (EMC):

EN 50081-1: class B

EN 50082-2:

- Electrical discharge IEC 1000-4-2
- Radial field IEC 1000-4-3
- Fast transients IEC 1000-4-4
- Magnetic field at 50/60 Hz IEC 1000-4-8

(1) Conditions of reference: 23 °C ± 5 °K, 20 % to 75 % RH, 48 Hz to 65 Hz, external magnetic field < 40 A/m, no DC component, no current-carrying conductor nearby, centred test sample, load impedance 5 Ω.

To order	Reference
AC current clamp model D30N with operating manual	P01120049A
AC current clamp model D30CN with operating manual	P01120064

Current clamp for AC current

Model D31N

DN series

Current	500 A AC	1000 A AC	1500 A AC
Ratio	500:1	1000:1	1500:1
Output	2 mA/A	1 mA/A	0.66 mA/A

Electrical specifications

Current calibres:

1 A AC ... 500 A AC
1 A AC ... 1000 A AC
1 A AC ... 1500 A AC

Current transformation ratio:

500:1, 1000:1, 1500:1

Output signal:

2 mA/A AC (1 A for 500 A)
1 mA/A AC (1 A for 1000 A)
0.66 mA/A AC (1 A for 1500 A)

Accuracy and phase shift ⁽¹⁾:

■ 500 A calibre

Primary current	25 A	100 A	500 A
% Accuracy of output signal	4 %	3 %	3 %
Phase shift	4°	3.5°	2°

- Load impedance: 5 Ω
- Overload: 700 A for 10 minutes
- Ampere second product: 6 A.s
- Accuracy:
in accordance with IEC 185-26-27, 5 VA,
class 3 from 48 Hz to 1000 Hz

■ 1000 A calibre

Primary current	50 A	200 A	1000 A
% Accuracy of output signal	3 %	1.5 %	1 %
Phase shift	3°	1.5°	1°

- Load impedance: 5 Ω
- Overload: 1400 A for 10 minutes
- Ampere second product: 30 A.s
- Accuracy:
in accordance with IEC 185-26-27, 5 VA,
class 1 from 48 Hz to 1000 Hz

■ 1500 A calibre

Primary current	75 A	300 A	1500 A
% Accuracy of output signal	1.5 %	0.75 %	0.5 %
Phase shift	1.5°	0.75°	0.5°

- Load impedance: 5 Ω
- Overload: 1800 A for 10 minutes
- Ampere second product: 65 A.s
- Accuracy:
in accordance with IEC 185-26-27, 5 VA
class 0.5 from 48 Hz to 1000 Hz

Bandwidth:

30 Hz to 1500 Hz (in continuous use above 1 kHz the max. measurement current is limited)

Load impedance:

< 5 Ω

Operating voltage:

600 V AC

Common mode voltage:

600 V AC

Max. voltage at output (secondary circuit open):

Electronic protection limiting the voltage to 42 V peak max.

Influence of adjacent conductor:

0.005 A/A AC

Influence of conductor position in jaws:

1.5 % ± 0.2 A on the 500:1 ratio
1 % ± 0.2 A on the 1000:1 ratio
1 % ± 0.2 A on the 1500:1 ratio

Mechanical specifications

Operating temperature:

-10 °C to +50 °C

Storage temperature:

-25 °C to +80 °C

Influence of temperature:

< 0.1 % per 10 °K

Max. jaw opening:

90 mm

Max. jaw insertion capacity:

Cable: 64 mm
Group of wires: 50 x 135 mm - 64 x 100 mm

Casing protection rating:

IP20 in accordance with IEC 529

Drop test:

500 mm (IEC 68-2-32)

Shock resistance:

100 g, in accordance with IEC 68-2-27

Vibration resistance:

10/55/10 Hz, 0.15 mm
test in accordance with IEC 68-2-6

Self-extinguishing capability:

Casing: UL94 V0
Jaws: UL94 V2

Dimensions:

120 x 315 x 48 mm

Weight:


1200 g

Colour:

Dark grey casing with red jaws

Output:

2 safety sockets (4 mm)

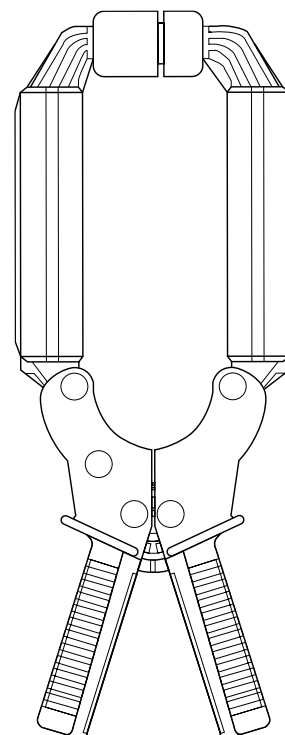

Safety specifications

Electrical safety:

Double insulation or reinforced insulation between the primary and the secondary circuits and the outside casing in accordance with IEC 1010-2-032.

- 600 V category III, pollution degree 2
- 300 V category IV, pollution degree 2

Electromagnetic compatibility (EMC):

EN 50081-1: class B

EN 50082-2:

- Electrical discharge IEC 1000-4-2
- Radial field IEC 1000-4-3
- Fast transients IEC 1000-4-4
- Magnetic field at 50/60 Hz IEC 1000-4-8

(1) Conditions of reference: 23 °C ± 5 °K, 20 % to 75 % RH, 48 Hz to 65 Hz, external magnetic field < 40 A/m, no DC component, no current-carrying conductor nearby, centred test sample.

To order	Reference
AC current clamp model D31N with operating manual	P01120050A

Current clamp for AC current

Model D32N

D_N series

Current	1000 A AC	2000 A AC	2400 A AC
Ratio	1000:1	2000:1	3000:1
Output	1 mA/A	0.5 mA/A	0.333 mA/A

Electrical specifications

Current calibres:

1 A AC ... 1000 A AC
1 A AC ... 2000 A AC
1 A AC ... 2400 A AC

Current transformation ratio:

1000:1, 2000:1, 3000:1

Output signal:

1 mA/A AC (1 A for 1000 A)
0.5 mA/A AC (1 A for 2000 A)
0.333 mA/A AC (1 A for 3000 A)

Accuracy and phase shift ⁽¹⁾:

■ 1000 A calibre

Primary current	50 A	200 A	1000 A
% Accuracy of output signal	3 %	1.5 %	1 %
Phase shift	3°	1.5°	1°

- Load impedance: 2.5 Ω
- Overload: 1400 A for 10 minutes
- Ampere second product: 25 A.s
- Accuracy:
in accordance with IEC 185-26-27, 2.5 VA,
class 1 from 48 Hz to 1000 Hz

■ 2000 A calibre

Primary current	100 A	400 A	2000 A
% Accuracy of output signal	1.5 %	0.75 %	0.5 %
Phase shift	1.5°	0.75°	0.5°

- Load impedance: 5 Ω
- Overload: 2400 A for 10 minutes
- Ampere second product: 60 A.s
- Accuracy:
in accordance with IEC 185-26-27, 5 VA,
class 0.5 from 48 Hz to 1000 Hz

■ 3000 A calibre

Primary current	150 A	600 A	3000 A
% Accuracy of output signal	1.5 %	0.75 %	0.5 %
Phase shift	1.5°	0.75°	0.5°

- Load impedance: 10 Ω
- Overload: 3400 A for 10 minutes
- Ampere second product: 90 A.s
- Accuracy:
in accordance with IEC 185-26-27, 10 VA
class 0.5 from 48 Hz to 1000 Hz

Bandwidth:

30 Hz to 1000 Hz (in continuous use above 600 Hz the max. measurement current is limited)

Load impedance:

< 10 Ω max

Operating voltage:

600 V AC

Common mode voltage:

600 V AC

Max. voltage at output (secondary circuit open):

Electronic protection limiting the voltage to 42 V peak max.

Influence of adjacent conductor:

0.005 A/A AC

Influence of conductor position in jaws:

1.5 % ± 0.2 A on the 1000:1 ratio
1 % ± 0.2 A on the 2000:1 ratio
1 % ± 0.2 A on the 3000:1 ratio

Mechanical specifications

Operating temperature:

-10 °C to +50 °C

Storage temperature:

-25 °C to +80 °C

Influence of temperature:

< 0.1 % per 10 °K

Max. jaw opening:

90 mm

Max. jaw insertion capacity:

Cable: 64 mm
Group of wires: 50 x 135 mm - 64 x 100 mm

Casing protection rating:

IP20 in accordance with IEC 529

Drop test:

500 mm (IEC 68-2-32)

Shock resistance:

100 g, in accordance with IEC 68-2-27

Vibration resistance:

10/55/10 Hz, 0.15 mm
test in accordance with IEC 68-2-6

Self-extinguishing capability:

Casing: UL94 V0

Jaws: UL94 V2

Dimensions:

120 x 315 x 48 mm

Weight:


1200 g

Colour:

Dark grey casing with red jaws

Output:

2 safety sockets (4 mm)

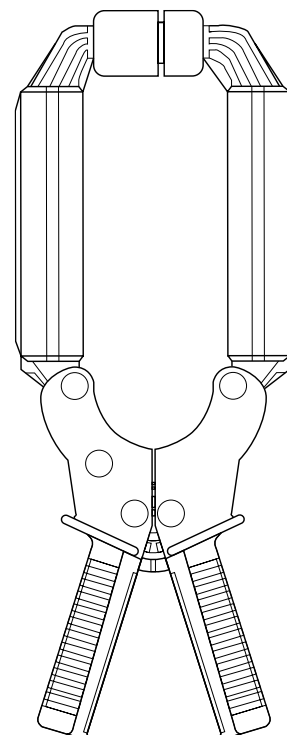

Safety specifications

Electrical safety:

Double insulation or reinforced insulation between the primary and the secondary circuits and the outside casing in accordance with IEC 1010-2-032.

- 600 V category III, pollution degree 2
- 300 V category IV, pollution degree 2

Electromagnetic compatibility (EMC):

EN 50081-1: class B

EN 50082-2:

- Electrical discharge IEC 1000-4-2
- Radial field IEC 1000-4-3
- Fast transients IEC 1000-4-4
- Magnetic field at 50/60 Hz IEC 1000-4-8

(1) Conditions of reference: 23 °C ± 5 °K, 20 % to 75 % RH, 48 Hz to 65 Hz, external magnetic field < 40 A/m, no DC component, no current-carrying conductor nearby, centred test sample.

To order	Reference
AC current clamp model D32N with operating manual	P01120051A

Current clamp for AC current

Model D33N

D_N series

Current	2400 A AC
Ratio	3000:5
Output	1.666 mA/A

■ Electrical specifications

Current calibre:

1 A AC ... 2400 A AC
(3000 A for temperature < 35 °C)

Current transformation ratio:

3000:5

Output signal:

1.666 mA/A AC (5 A for 3000 A)

Accuracy and phase shift ⁽¹⁾:

Primary current	150 A	600 A	3000 A
Accuracy in % of output signal	3 %	1.5 %	1 %
Phase shift	3°	1.5°	1°

Overload:

3600 A for 10 minutes

Accuracy:

In accordance with IEC 185-26-27, 5 VA
class 1 from 48 Hz to 1000 Hz

Bandwidth:

30 Hz to 5 kHz (in continuous use above
1 kHz, the max. measurement current is
limited)

Ampere second product:

90 A.s

Load impedance:

< 1 Ω

Operating voltage:

600 V AC

Common mode voltage:

600 V AC

Influence of adjacent conductor:

0.005 A/A AC

Influence of conductor position in jaws:

1 % ± 0.1 A

■ Mechanical specifications

Operating temperature:

-10 °C to +50 °C

Storage temperature:

-25 °C to +80 °C

Influence of temperature:

< 0.1 % per 10 °K

Max. jaw opening:

90 mm

Max. jaw insertion capacity:

Cable: 64 mm

Group of wires: 50 x 135 mm - 64 x 100 mm

Casing protection rating:

IP20 in accordance with IEC 529

Drop test:

500 mm (IEC 68-2-32)

Shock resistance:

100 g, in accordance with IEC 68-2-27

Vibration resistance:

10/55/10 Hz, 0.15 mm
test in accordance with IEC 68-2-6

Self-extinguishing capability:

Casing: UL94 V0

Jaws: UL94 V2

Dimensions:

120 x 315 x 48 mm

Weight:


1200 g

Colour:

Dark grey casing with red jaws

Output:

2 safety sockets (4 mm)

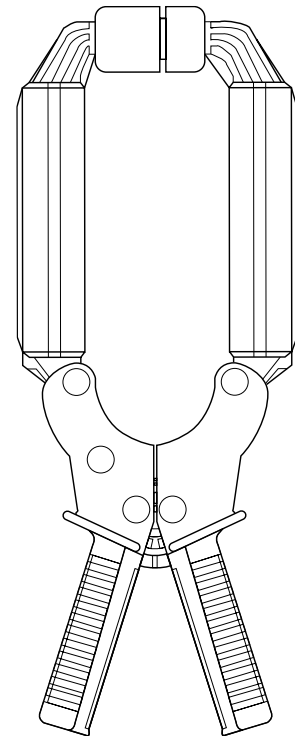

■ Safety specifications

Electrical safety:

Double insulation or reinforced insulation
between the primary and the secondary
circuits and the outside casing in
accordance with IEC 1010-2-032.

- 600 V category III, pollution degree 2
- 300 V category IV, pollution degree 2

Electromagnetic compatibility (EMC):

EN 50081-1: class B

EN 50082-2:

- Electrical discharge IEC 1000-4-2
- Radial field IEC 1000-4-3
- Fast transients IEC 1000-4-4
- Magnetic field at 50/60 Hz IEC 1000-4-8

(1) Conditions of reference: 23 °C ± 5 °K, 20 % to 75 % RH, 48 Hz to 65 Hz, external magnetic field < 40 A/m, no DC component, no current-carrying conductor nearby, centred test sample, load impedance 0.2 Ω.

To order	Reference
AC current clamp model D33N with operating manual	P01120052A

Current clamp for AC current

Model D34N

D_N series

Current	500 A AC	1000 A AC	1500 A AC
Ratio	500:5	1000:5	1500:5
Output	10 mA/A	5 mA/A	3.33 mA/A

Electrical specifications

Current calibres:

1 A AC ... 500 A AC
1 A AC ... 1000 A AC
1 A AC ... 1500 A AC

Current transformation ratio:

500:5, 1000:5, 1500:5

Output signal:

10 mA/A AC (5 A for 500 A)
5 mA/A AC (5 A for 1000 A)
3.33 mA/A AC (5 A for 1500 A)

Accuracy and phase shift ⁽¹⁾:

■ 500 A calibre

Primary current	25 A	100 A	500 A
Accuracy in % of output signal	5 %	3 %	3 %
Phase shift	6°	4°	4°

- Load impedance: 0.2 Ω
- Overload: 700 A for 10 minutes
- Ampere second product: 3.5 A.s
- Accuracy: in accordance with IEC 185-26-27, 5 VA class 3 from 48 Hz to 1000 Hz

■ 1000 A calibre

Primary current	50 A	200 A	1000 A
Accuracy in % of output signal	3 %	1.5 %	1 %
Phase shift	3°	1.5°	1°

- Load impedance: 0.1 Ω
- Overload: 1400 A for 10 minutes
- Ampere second product: 18 A.s
- Accuracy: in accordance with IEC 185-26-27, 2.5 VA class 1 from 48 Hz to 1000 Hz

■ 1500 A calibre

Primary current	75 A	300 A	1500 A
Accuracy in % of output signal	1.5 %	0.75 %	0.5 %
Phase shift	1.5°	0.75°	0.5°

- Load impedance: 0.1 Ω
- Overload: 1800 A for 10 minutes
- Ampere second product: 40 A.s
- Accuracy: in accordance with IEC 185-26-27, 2.5 VA class 0.5 from 48 Hz to 1000 Hz

Bandwidth:

30 Hz to 1500 Hz (in continuous use above 1.5 kHz the max. measurement current is limited)

Load impedance:

< 1 Ω max

Operating voltage:

600 V AC

Common mode voltage:

600 V AC

Max. voltage at output (secondary circuit open):

Electronic protection limiting the voltage to 42 V peak max.

Influence of adjacent conductor:

0.005 A/A AC

Influence of conductor position in jaws:

1.5 % ± 0.2 A on the 500:5 ratio
1 % ± 0.2 A on the 1000:5 ratio
1 % ± 0.2 A on the 1500:5 ratio

Mechanical specifications

Operating temperature:

-10 °C to +50 °C

Storage temperature:

-25 °C to +80 °C

Influence of temperature:

< 0.1 % per 10 °K

Max. jaw opening:

90 mm

Max. jaw insertion capacity:

Cable: 64 mm
Group of wires: 50 x 135 mm - 64 x 100 mm

Casing protection rating:

IP20 in accordance with IEC 529

Drop test:

500 mm (IEC 68-2-32)

Shock resistance:

100 g, in accordance with IEC 68-2-27

Vibration resistance:

10/55/10 Hz, 0.15 mm
test in accordance with IEC 68-2-6

Self-extinguishing capability:

Casing: UL94 V0
Jaws: UL94 V2

Dimensions:

120 x 315 x 48 mm

Weight:


1200 g

Colour:

Dark grey casing with red jaws

Output:

2 safety sockets (4 mm)

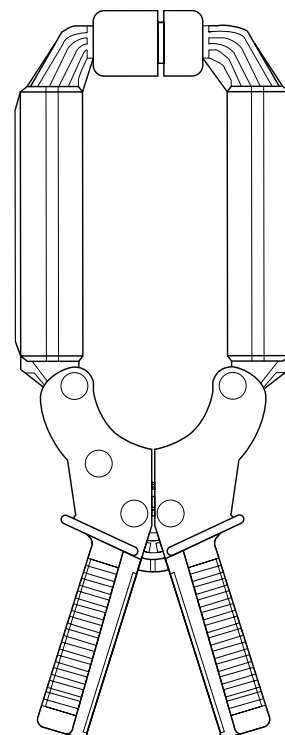

Safety specifications

Electrical safety:

Double insulation or reinforced insulation between the primary and the secondary circuits and the outside casing in accordance with IEC 1010-2-032.

- 600 V category III, pollution degree 2
- 300 V category IV, pollution degree 2

Electromagnetic compatibility (EMC):

EN 50081-1: class B

EN 50082-2:

- Electrical discharge IEC 1000-4-2
- Radial field IEC 1000-4-3
- Fast transients IEC 1000-4-4
- Magnetic field at 50/60 Hz IEC 1000-4-8

(1) Conditions of reference: 23 °C ± 5 °K, 20 % to 75 % RH, 48 Hz to 65 Hz, external magnetic field < 40 A/m, no DC component, no current-carrying conductor nearby, centred test sample.

To order	Reference
AC current clamp model D34N with operating manual	P01120053A

Current clamp for AC current

Model D35N

D_N series

Current	1000 AAC	2000 AAC	2400 AAC
Ratio	1000:5	2000:5	3000:5
Output	5 mA/A	2.5 mA/A	1.666 mA/A

Electrical specifications

Current calibres:

1 AAC ... 1000 AAC

1 AAC ... 2000 AAC

1 AAC ... 2400 AAC

(3000 A for temperature < 35 °C)

Current transformation ratio:

1000:5, 2000:5, 3000:5

Output signal:

5 mA/A AC (5 A for 1000 A)

2.5 mA/A AC (5 A for 2000 A)

1.666 mA/A AC (5 A for 3000 A)

Accuracy and phase shift ⁽¹⁾:

■ 1000 A calibre

Primary current	50 A	200 A	1000 A
% Accuracy of output signal	3 %	1.5 %	1 %
Phase shift	3°	1.5°	1°

- Load impedance: 0.1 Ω
- Overload: 1200 A for 10 minutes
- Ampere second product: 15 A.s
- Accuracy: in accordance with IEC 185-26-27, 2.5 VA, class 1 from 48 Hz to 1000 Hz

■ 2000 A calibre

Primary current	100 A	400 A	2000 A
% Accuracy of output signal	1.5 %	0.75 %	0.5 %
Phase shift	1.5°	0.75°	0.5°

- Load impedance: 0.2 Ω
- Overload: 2400 A for 10 minutes
- Ampere second product: 50 A.s
- Accuracy: in accordance with IEC 185-26-27, 5 VA, class 0.5 from 48 Hz to 1000 Hz

■ 3000 A calibre

Primary current	150 A	600 A	3000 A
% Accuracy of output signal	1.5 %	0.75 %	0.5 %
Phase shift	1.5°	0.75°	0.5°

- Load impedance: 0.4 Ω
- Overload: 2400 A for 10 minutes
- Ampere second product: 80 A.s
- Accuracy: in accordance with IEC 185-26-27, 10 VA class 0.5 from 48 Hz to 1000 Hz

Bandwidth:

30 Hz to 1500 Hz (in continuous use above 1.5 kHz, the max. measurement current is limited)

Load impedance:

< 2 Ω max

Operating voltage:

600 V AC

Common mode voltage:

600 V AC

Influence of adjacent conductor:

0.005 A/A AC

Influence of conductor position in jaws:

1.5 % ± 0.2 A on the 1000:5 ratio

1 % ± 0.2 A on the 2000:5 ratio

1 % ± 0.2 A on the 3000:5 ratio

Mechanical specifications

Operating temperature:

-10 °C to +50 °C

Storage temperature:

-25 °C to +80 °C

Influence of temperature:

< 0.1 % per 10 °K

Max. jaw opening:

90 mm

Max. jaw insertion capacity:

Cable: 64 mm

Group of wires: 50 x 135 mm - 64 x 100 mm

Casing protection rating:

IP20 in accordance with IEC 529

Drop test:

500 mm (IEC 68-2-32)

Shock resistance:

100 g, in accordance with IEC 68-2-27

Vibration resistance:

10/55/10 Hz, 0.15 mm

test in accordance with IEC 68-2-6

Self-extinguishing capability:

Casing: UL94 V0

Jaws: UL94 V2

Dimensions:

120 x 315 x 48 mm

Weight:


1200 g

Colour:

Dark grey casing with red jaws

Output:

Safety sockets (4 mm)

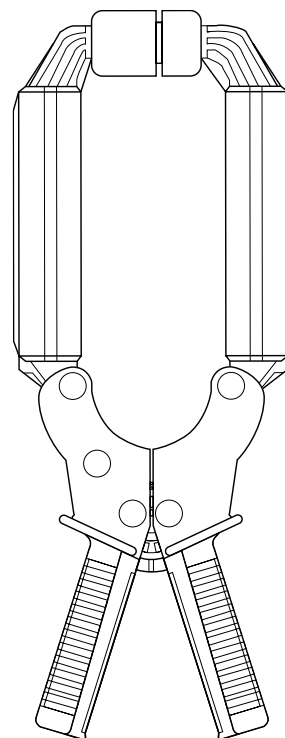

Safety specifications

Electrical safety:

Double insulation or reinforced insulation between the primary and the secondary circuits and the outside casing in accordance with IEC 1010-2-032.

- 600 V category III, pollution degree 2
- 300 V category IV, pollution degree 2

Electromagnetic compatibility (EMC):

EN 50081-1: class B

EN 50082-2:

- Electrical discharge IEC 1000-4-2
- Radial field IEC 1000-4-3
- Fast transients IEC 1000-4-4
- Magnetic field at 50/60 Hz IEC 1000-4-8

(1) Conditions of reference: 23 °C ± 5 °K, 20 % to 75 % RH, 48 Hz to 65 Hz, external magnetic field < 40 A/m, no DC component, no current-carrying conductor nearby, centred test sample.

To order	Reference
AC current clamp model D35N with operating manual	P01120054A

Current clamp for AC current

Model D36N

D_N series

Current	3000 A AC
Ratio	3000:3
Output	1 mA/A

■ Electrical specifications

Current calibre:

1 A AC ... 2400 A AC

Current transformation ratio:

3000:3

Output signal:

1 mA/A AC (3 A for 3000 A)

Accuracy and phase shift ⁽¹⁾:

Primary current	150 A	600 A	3000 A
% Accuracy of output signal	0.5 %	0.75 %	0.5 %
Phase shift	1.5°	0.75°	0.5°

Accuracy:

In accordance with IEC 185-26-27, 5 VA, class 0.5 from 48 Hz to 1000 Hz

Bandwidth:

30 Hz to 5 kHz

(beyond 400 Hz the output is limited in inverse proportion to the frequency)

Overload:

3600 A for 5 minutes

Max. voltage output

(secondary circuit open):

Electronic protection limiting the voltage to 42 V peak max.

Load impedance:

< 0.6 Ω

Operating voltage:

600 V AC

Common mode voltage:

600 V AC

Influence of adjacent conductor:

0.005 A/A AC

Influence of conductor position in jaws:

1 % ± 0.1 A

■ Mechanical specifications

Operating temperature:

-10 °C to +50 °C

Storage temperature:

-25 °C to +80 °C

Influence of temperature:

< 0.1 % per 10 °K

Max. jaw opening:

90 mm

Max. jaw insertion capacity:

Cable: 64 mm

Group of wires: 50 x 135 mm - 64 x 100 mm

Casing protection rating:

IP20 in accordance with IEC 529

Drop test:

500 mm (IEC 68-2-32)

Shock resistance:

100 g, in accordance with IEC 68-2-27

Vibration resistance:

10/55/10 Hz, 0.15 mm

test in accordance with IEC 68-2-6

Self-extinguishing capability:

Casing: UL94 V0

Jaws: UL94 V2

Dimensions:

120 x 315 x 48 mm

Weight:


1200 g

Colour:

Dark grey casing with red jaws

Output:

Safety sockets (4 mm)

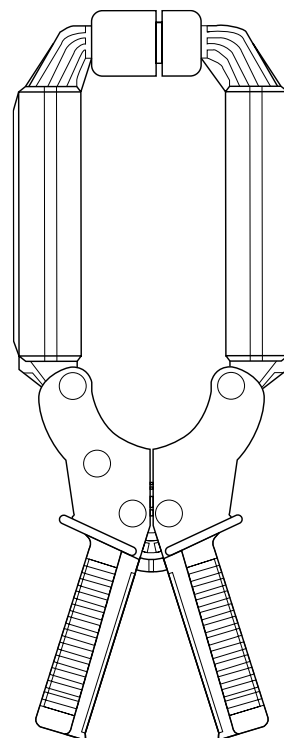

■ Safety specifications

Electrical safety:

Double insulation or reinforced insulation between the primary and the secondary circuits and the outside casing in accordance with IEC 1010-2-032.

- 600 V category III, pollution degree 2
- 300 V category IV, pollution degree 2

Electromagnetic compatibility (EMC):

EN 50081-1: class B

EN 50082-2:

- Electrical discharge IEC 1000-4-2
- Radial field IEC 1000-4-3
- Fast transients IEC 1000-4-4
- Magnetic field at 50/60 Hz IEC 1000-4-8

(1) Conditions of reference: 23 °C ± 5 °K, 20 % to 75 % RH, 48 Hz to 65 Hz, external magnetic field < 40 A/m, no DC component, no current-carrying conductor nearby, centred test sample, load impedance 0,55 Ω.

To order	Reference
AC current clamp model D36N with operating manual	P01120055A

Current clamp for AC current

Model D37N

D_N series

Current	30 AAC	300 AAC	3000 AAC
Output	100 mV/A	10 mV/A	1 mV/A

Electrical specifications

Current calibres:

10 mA...30 AAC
1 AAC...300 AAC
1 AAC...2000 AAC
(2800 A for temperature < 35 °C)

Output signal:

100 mV/A AC (3 V for 30 A) 90 A peak
10 mV/A AC (3 V for 300 A) 900 A peak
1.666 mV/A AC (3 V for 3000 A) 9000 A peak

Accuracy and phase shift ⁽¹⁾:

■ 30 A calibre

Primary current	1.5 A	6 A	30 A
% Accuracy of output signal	2 % ± 10 mV		
Phase shift	15°	7°	5°

■ 300 A calibre

Primary current	15 A	60 A	300 A
% Accuracy of output signal	2 % ± 2 mV		
Phase shift	3°	1.5°	1°

■ 3000 A calibre

Primary current	150 A	600 A	3000 A
% Accuracy of output signal	2 % ± 0.5 mV		
Phase shift	1.5°	1°	0.5°

Overload:

3200 A for 5 mn

Ampere second product:

100 A.s

dV/dt:

100 mVAC/AAC: dV/dt = 400 mV/μs
10 mVAC/AAC: dV/dt = 50 mV/μs
1 mVAC/AAC: dV/dt = 5 mV/μs

Bandwidth:

30 Hz to 5 kHz (on the 3000 A range the max. measurement current is limited above 200 Hz)

Load impedance:

≥ 1 MΩ

Operating voltage:

600 V AC

Common mode voltage:

600 V AC

Influence of adjacent conductor:

0.005 A/AAC

Influence of conductor position in jaws:

1.5 % of the reading

Influence of frequency:

30 Hz to 5 kHz:
± 6 % on all calibres

Influence of DC current:

0.04 % per A DC

Mechanical specifications

Operating temperature:

-10 °C to +50 °C

Storage temperature:

-25 °C to +80 °C

Influence of temperature:

< 0.1 % per 10 °K

Max. jaw opening:

90 mm

Max. jaw insertion capacity:

Cable: 64 mm

Group of wires: 50 x 135 mm - 64 x 100 mm

Casing protection rating:

IP20 in accordance with IEC 529

Drop test:

500 mm (IEC 68-2-32)

Shock resistance:

100 g, in accordance with IEC 68-2-27

Vibration resistance:

10/55/10 Hz, 0.15 mm
test in accordance with IEC 68-2-6

Self-extinguishing capability:

Casing: UL94 V0

Jaws: UL94 V2

Dimensions:

120 x 315 x 48 mm

Weight:


1200 g

Colour:

Dark grey casing with red jaws

Output:

Safety sockets (4 mm)

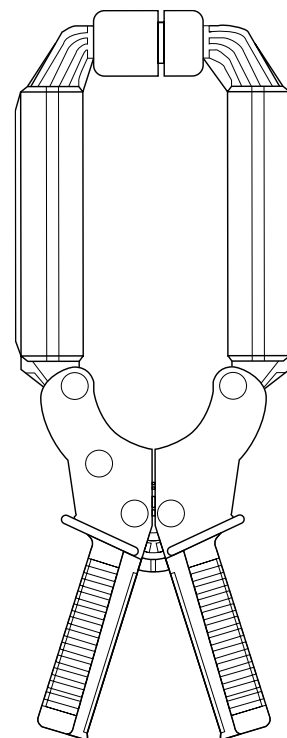

Safety specifications

Electrical safety:

Double insulation or reinforced insulation between the primary and the secondary circuits and the outside casing in accordance with IEC 1010-2-032.

- 600 V category III, pollution degree 2
- 300 V category IV, pollution degree 2

Electromagnetic compatibility (EMC):

EN 50081-1: class B

EN 50082-2:

- Electrical discharge IEC 1000-4-2
- Radial field IEC 1000-4-3
- Fast transients IEC 1000-4-4
- Magnetic field at 50/60 Hz IEC 1000-4-8

(1) Conditions of reference: 23 °C ± 5 °K, 20 % to 75 % RH, 48 Hz to 65 Hz, external magnetic field < 40 A/m, no DC component, no current-carrying conductor nearby, centred test sample.

To order	Reference
AC current clamp model D37N with operating manual	P01120056A

Oscilloscope clamp for AC current

Model D38N (insulated AC current probe)

D_N series

Current	90 A peak	900 A peak	9000 A peak
Output	10 mV/A	1 mV/A	0.1 mV/A

Description

The D38N offers accurate AC current measurement and a voltage output in mV allowing direct readings on oscilloscopes. A switch with 3 positions on the handle can be used to select the ranges. The wide opening of the jaws means they can be used on cables and small busbars.

Electrical specifications

Current calibres:

1 A AC ... 30 A AC (90 A peak)
1 A AC ... 300 A AC (900 A peak)
1 A AC ... 2400 A AC (9000 A peak)
(3000 A for temperature < 35 °C)

Output signal:

10 mV/A AC (3 V for 30 A)
1 mV/A AC (3 V for 300 A)
0.1 mV/A AC (3 V for 3000 A)

Accuracy and phase shift ⁽¹⁾:

■ 30 A calibre

Primary current	1.5 A	6 A	30 A	36 A
% Accuracy of output signal	2 % ± 1 mV			
Phase shift	≤ 20°	≤ 10°	≤ 5°	≤ 5°

■ 300 A calibre

Primary current	15 A	60 A	300 A	360 A
% Accuracy of output signal	2 % ± 0.5 mV			
Phase shift	≤ 3°	≤ 1.5°	≤ 1°	≤ 1°

■ 3000 A calibre

Primary current	150 A	600 A	3000 A	3600 A
% Accuracy of output signal	2 % ± 0.2 mV			
Phase shift	≤ 3°	≤ 1.5°	≤ 1°	≤ 1°

Bandwidth:

10 Hz to 50 kHz (depending on current)

Rise/fall time from 10 % to 90 %:

4 μs

10 % delay time:

0.3 μs

Ampere second product:

- 30 A calibre: 30 A.s
- 300 A calibre: 125 A.s
- 3000 A calibre: 180 A.s

Insertion impedance (at 400 Hz / 10 kHz):

- 30 A calibre: < 0.1 mΩ / < 1 mΩ
- 300 A calibre: < 0.1 mΩ / < 0.5 mΩ
- 3000 A calibre: < 0.1 mΩ / < 0.4 mΩ

Maximum currents:

I < 2400 A permanent
2400 A ... 2800 A for 10 minutes and then 30 minutes shutdown
2800 A ... 4000 A for 5 minutes and then 30 minutes shutdown

Output impedance:

- 30 A calibre: ≤ 130 Ω ± 15 %
- 300 A calibre: ≤ 140 Ω ± 15 %
- 3000 A calibre: ≤ 140 Ω ± 15 %

Influence of temperature:

≤ 0.2 % of output signal per 10 °K

Influence of adjacent conductor:

≤ 5 mA/A at 50 Hz

Influence of DC current < 10 % of rated calibre superimposed on the rated current:

0.05 % / A DC

Influence of conductor position in jaws:

≤ 1 % + 0.1 A at 50/60 Hz

Influence of frequency ⁽²⁾:

- 30 A calibre: < 1 dB from 10 Hz...10 kHz
- 300 A calibre: < 1 dB from 10 Hz...10 kHz
- 3000 A calibre: < 1 dB from 10 Hz...10 kHz

Mechanical specifications

Max. jaw opening:

90 mm

Clamping capacity:

Cable: Ø max 64 mm
Group of busbars:
5 busbars of 125 x 5 mm
3 busbars of 100 x 10 mm
(busbars spaced by their thickness)

Output:

2 m coaxial lead with insulated BNC plug

Dimensions:

310 x 120 x 48 mm

Weight:

1200 g

Operating temperature:

-10 °C to +50 °C

Storage temperature:

-25 °C to +80 °C

Relative humidity for operation:

0 to 85 % RH with a linear decrease above 35 °C

Operating altitude:


0 to 2,000 m

Casing protection rating:

IP 20 (IEC 529)

Drop test:

0.5 m (IEC 68-2-32)

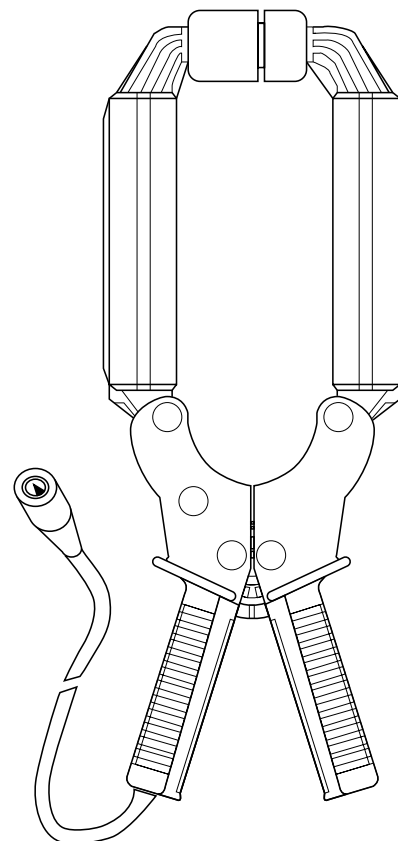

Shock resistance:

100 g / 6 ms / half-period (IEC 68-2-27)

Protection against impacts:

IK04 0.5 J (EN 50102)

Vibration resistance:

10/55/10 Hz, 0.15 mm (IEC 68-2-6)

Self-extinguishing capability:

Handles: UL94 V0

Jaws: UL94 V2

Colours:

Dark grey handles with red jaws

Safety specifications

Electrical safety:

Instrument with double insulation or reinforced insulation between the primary, the secondary and the grippable part located under the guard as per IEC 1010-1 & IEC 1010-2-032

- 600 V category III, pollution degree 2

- 300 V category IV, pollution degree 2

Oscilloscope clamp for AC current


Model D38N (insulated AC current probe)

D_N series


■ Curves at 50 Hz

30 A calibre

Error on measurement

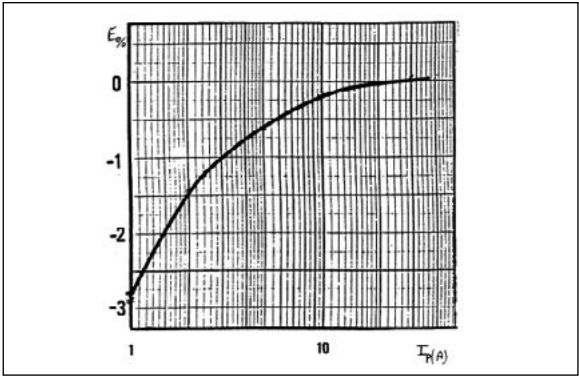


Phase shift

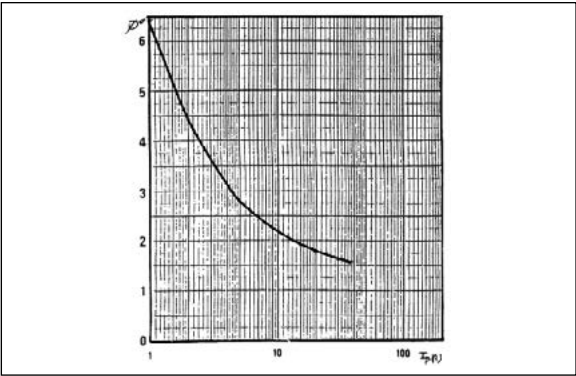


300 A calibre

Error on measurement

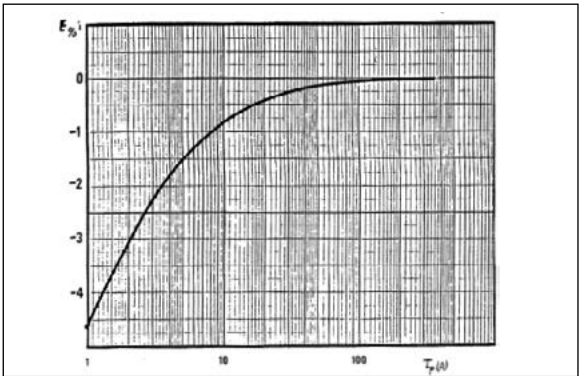


Phase shift

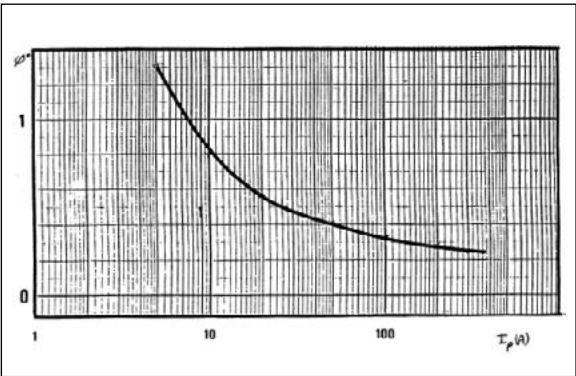


3000 A calibre

Error on measurement

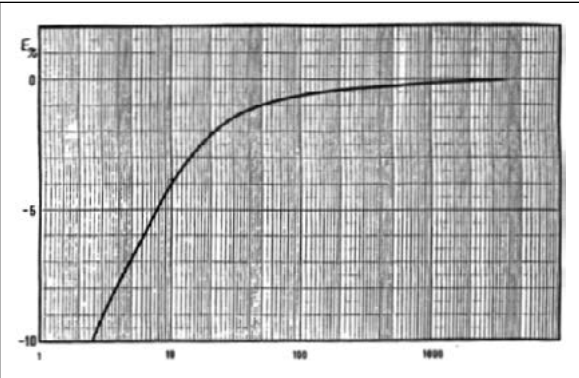

Phase shift

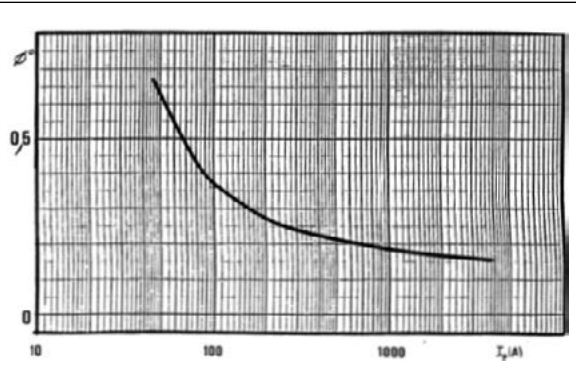



Oscilloscope clamp for AC current Model D38N (insulated AC current probe)

D_N series

■ Frequency response



30 A calibre

I = 10 A

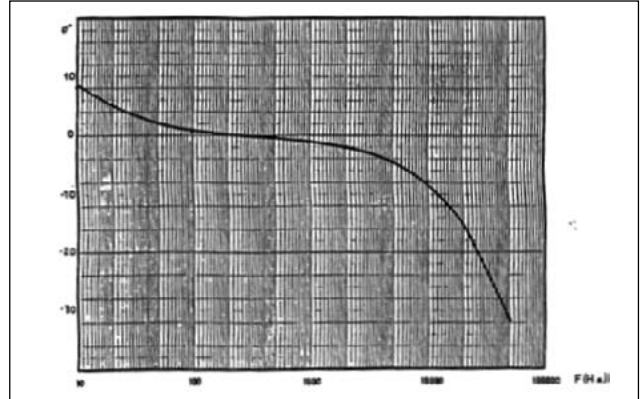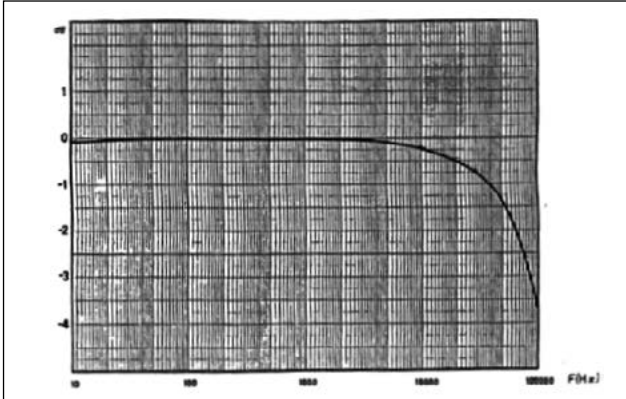



300 A calibre

I = 10 A

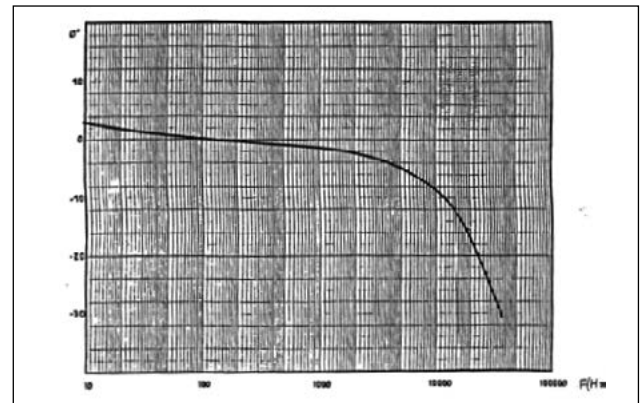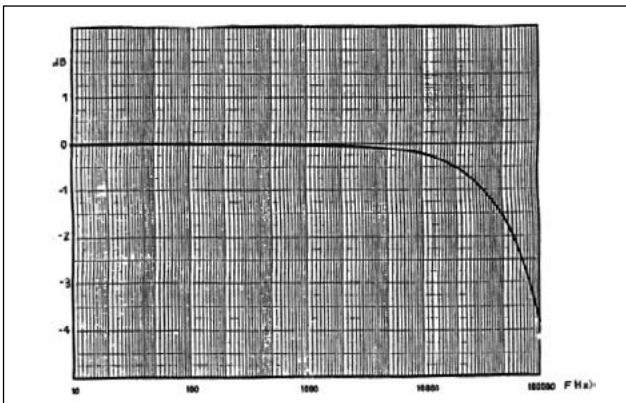

3000 A calibre

I = 100 A

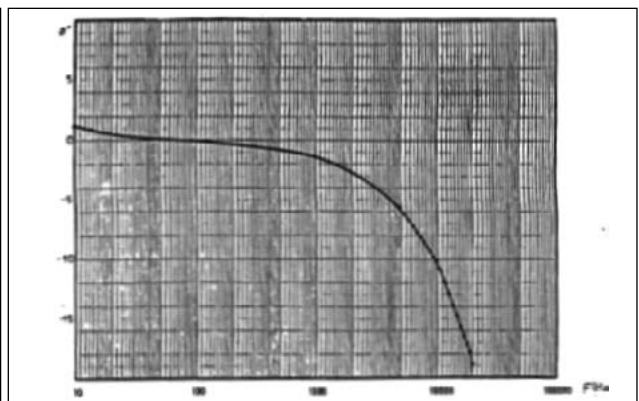
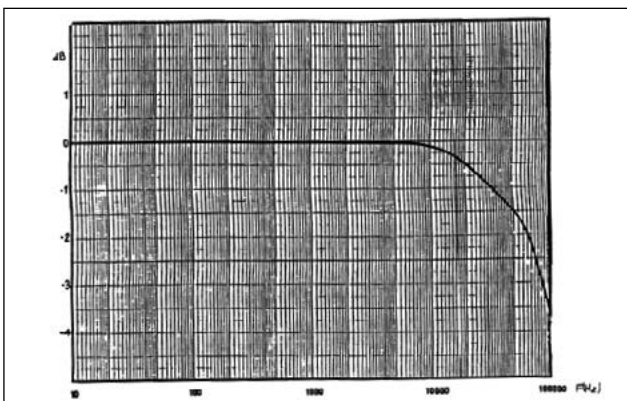


Oscilloscope clamp for AC current Model D38N (insulated AC current probe)

D_N series

■ Response to a step ($I_p = 1$ A)


30 A calibre

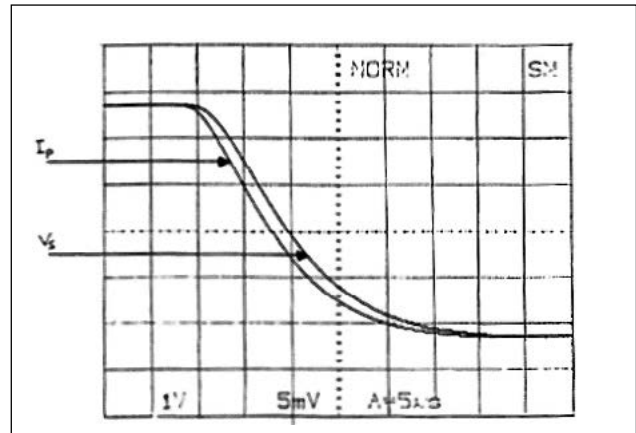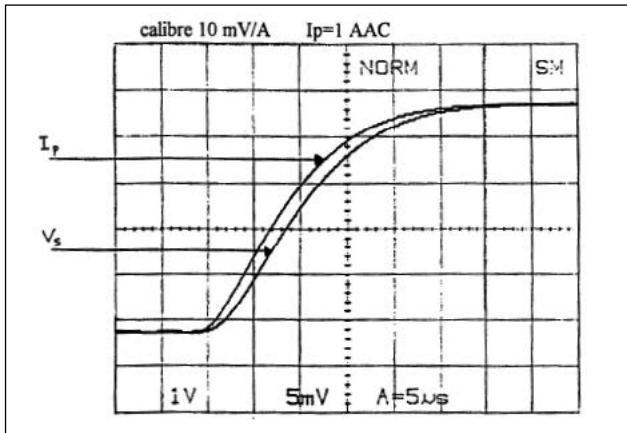


■ Response to a square signal ($I_p = 10$ A)

30 A calibre


10 Hz

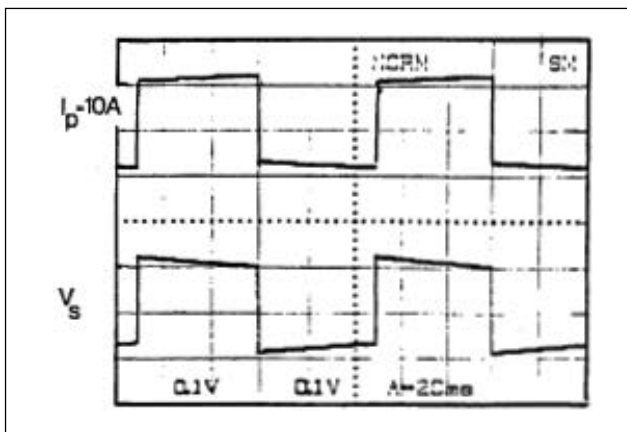


100 Hz

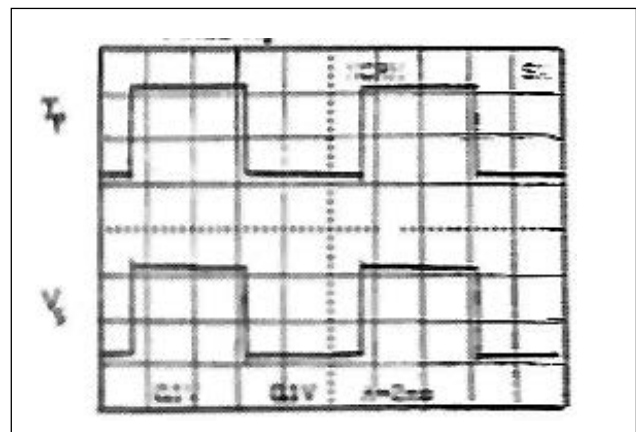

1 kHz

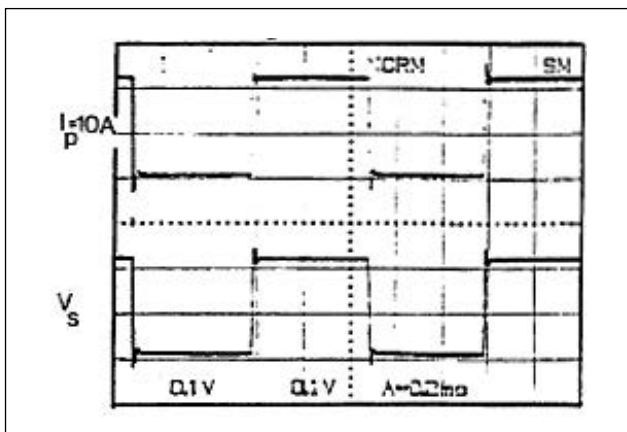

10 kHz

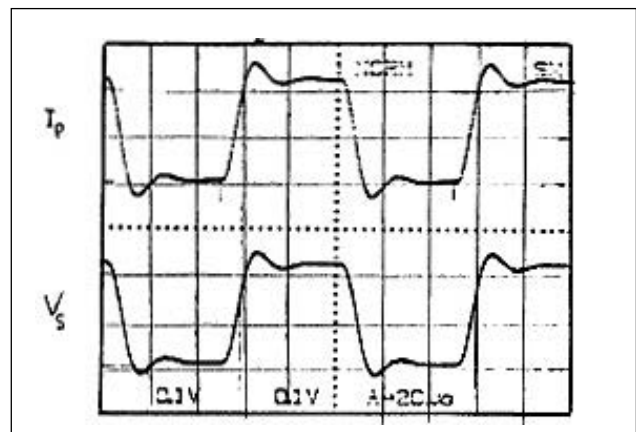


Oscilloscope clamp for AC current


Model D38N (insulated AC current probe)

D_N series

■ Influence of a DC current superimposed on the signal

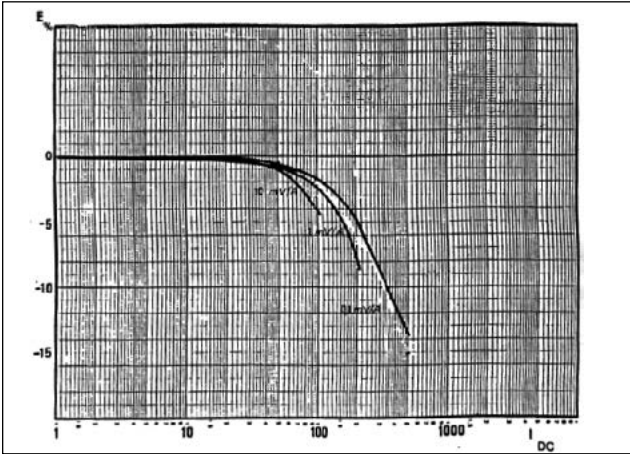

■ Maximum current according to the frequency

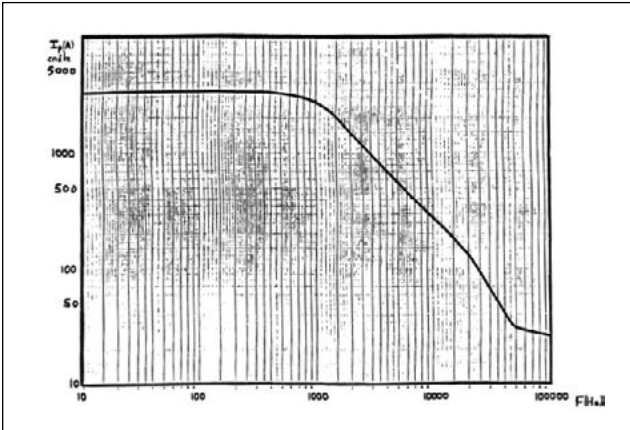

(1) Conditions of reference: 23 °C ± 3 °K, 20 % to 75 % RH, sinusoidal signal with frequency of 48 Hz at 65 Hz, external magnetic field < 40 A/m, no DC components, no external conductor with circulating current, conductor centred for measurement, load impedance >1 MΩ / < 47 pF.
(2) Out of reference domain.

To order	Reference
AC current clamp model D38N for oscilloscope, with operating manual	P01120057A