



LCR-821 (12Hz~200kHz)
 LCR-819/829 (12Hz~100kHz)
 LCR-817/827 (12Hz~10kHz)
 LCR-816/826 (100Hz~2kHz)




FEATURES

- * Test Frequency:
 - 12Hz~200kHz (LCR-821)
 - 12Hz~100kHz (LCR-819/829)
 - 12Hz~10kHz (LCR-817/827)
 - 100Hz~2kHz (LCR-816/826)
- * 0.05~0.1% Measurement Accuracy
- * 100 Sets Memory for Save/Recall of Setup State
- * R/Q, C/D, C/R, L/Q Test Modes for all Models;
Z/θ, L/R for LCR-821 Only
- * Absolute Value, Δ Value, and Δ % Measurement Display
- * 240 x 128 dot Matrix LCD Display
- * Test Condition and Test Result Shown on the Screen Simultaneously
- * Interface : RS-232C , Handler

The LCR-800 Series is a high-class digital LCR meter for component/material measurements, applicable to various R&D activities and production lines. A large 240x128 dot Matrix LCD display gives room for two measurement items plus setup parameters, and lets users get the whole picture in an instant. Measurement result is always accompanied with supplement factor as in R/Q, C/D, C/R, and L/Q. The LCR-821 also contains more accurate resistance measurement as a combination of absolute value and phase angle. 100 sets of measurement setup memory allow sharing LCR-800 series among multiple testing conditions or sites. For a better viewing experience with standard PC monitor, Windows based proprietary software is accessible via RS-232C terminal. The handler interface is standard for LCR-826/827/829 models.

SPECIFICATIONS

TEST FREQUENCY	
	12Hz ~ 200kHz (504 steps) for LCR-821 12Hz ~ 100kHz (503 steps) for LCR-819/829 12Hz ~ 10kHz (489 steps) for LCR-817/827 100Hz ~ 2kHz (245 steps) for LCR-816/826
BASIC ACCURACY	
	0.05% for basic accuracy for LCR-821/819/817 0.1% for basic accuracy for LCR-829/827/826/816
TEST SPEED	
	68ms for LCR-821/819/817/816, 34ms for LCR-829/827/826
TEST SIGNAL LEVELS	
	5mV ~ 1.275Vrms (5mV/step) for LCR-821/819/829/817/827 0.1V ~ 1.275Vrms (5mV/step) for LCR-816/826
DC BIAS	
Internal External	2V 0 ~ 35V for LCR-821; 0 ~ 30V for LCR-819/829/817/827/816/826
DISPLAY RANGE	
Resistance Capacitance Inductance Quality Factor Dissipation Factor Impedance Phase Angle (Degree)	R 0.00001Ω ~ 99999kΩ C 0.00001pF ~ 99999μF L 0.00001mH ~ 99999H Q 0.0001 ~ 9999 D 0.0001 ~ 9999Ω Z 0.00001Ω ~ 99999k for LCR-821 θ -180.00° ~ 180.00° for LCR-821
TEST MODE	
	R/Q, C/D, C/R, L/Q Z/θ, L/R for LCR-821 only
EQUIVALENT CIRCUIT	
	Parallel or Serial selectable
MEMORY	
	100 memory blocks totally
AVERAGE	
	1 to 255 times
TEST SPEED MODE	
	SLOW, MEDIUM and FAST
DISPLAY MODE	
	Value, Δ, Δ %
DISPLAY	
	240x128 dot matrix C.C.F.L back light LCD
INTERFACE	
	Standard Interface : RS-232C for LCR-821 Standard Interface : Handler Interface for LCR-829/827/826 Optional : RS-232C Interface for LCR-819/817/816 (factory installed) (Including LCR-Viewer Software)
POWER SOURCE	
	AC 100V ~ 240V, 50/60Hz
DIMENSIONS & WEIGHT	
	330 (W) x 149 (H) x 437 (D)mm, Approx. 5.5kg

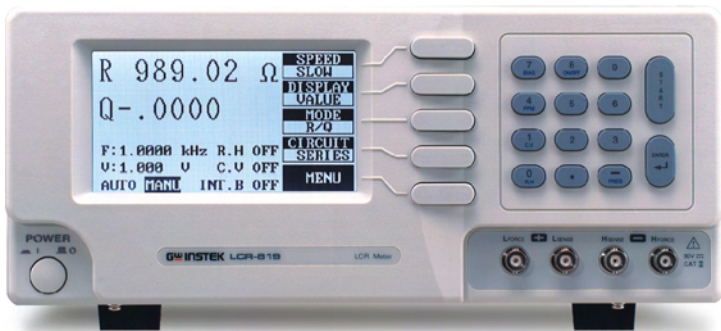

LCR-819

Rear Panel



LCR-800 SERIES SELECTION GUIDE

MODEL	LCR-821	LCR-819	LCR-829	LCR-817	LCR-827	LCR-816	LCR-826
Display	240 x 128 dot matrix CCFL back light LCD						
Test Frequency	12Hz~200kHz (504 steps)	12Hz~100kHz (503 steps)		12Hz~10kHz (489 steps)		100Hz~2kHz (245 steps)	
Basic Accuracy	0.05%	0.05%	0.1%	0.05%	0.1%	0.1%	
Test Mode	R/Q, C/D, C/R L/Q, Z/θ, L/R	R/Q, C/D, C/R, L/Q		R/Q, C/D, C/R, L/Q		R/Q, C/D, C/R, L/Q	
Memory	100 memory blocks totally						
DC BIAS	Internal	2V	2V	2V	2V	2V	
	External	0 ~35V	0 ~30V	0 ~30V	0 ~30V	0 ~30V	
Interface	RS-232	Std.	Opt.		Opt.		Opt.
	Handler			Std.		Std.	Std.

ORDERING INFORMATION

LCR-821 200kHz High Precision LCR Meter
LCR-819 100kHz High Precision LCR Meter
LCR-829 100kHz High Precision LCR Meter with Handler Interface
LCR-817 10kHz High Precision LCR Meter
LCR-827 10kHz High Precision LCR Meter with Handler Interface
LCR-816 2kHz High Precision LCR Meter
LCR-826 2kHz High Precision LCR Meter with Handler Interface

ACCESSORIES :

User manual x 1, Power cord x1, LCR-06A x 1

Optional Accessories

LCR-05 Test Fixture for Axial & Radial Leaded Components
LCR-06A Kelvin Clip Test Leads
LCR-07 Test Fixture, Two-Wire with Alligator Clips
LCR-08 Test Fixture(Tweezers) for SMD/Chip Components
LCR-09 Test Fixture for SMD/Chip Components
LCR-13 Test Fixture for SMD/Chip Components
GRA-402 Rack Adapter Panel, Rack Mounting (19", 4U)
GTL-232 RS232C Cable, 9-pin Female to 9-pin, null Modem for Computer
GTC-001 Instrument Cart
GTC-002 Instrument Cart

LCR-06A



Description:
 Kelvin clip test leads.
 Frequency: DC to 1MHz
 Max. Voltage: +/- 35V

LCR-05

Patent:185538



Description:
 Test fixture for measurement
 of both axial and vertical
 lead components
 Frequency: DC to 1MHz
 Max. Voltage: +/- 35V

LCR-07



Description:
 Test leads for conventional
 component measurement.
 It is especially useful for high
 impedance measurement.
 (With alligator clips)
 Two-wire measurement;
 apply to low C or high R.
 Frequency: DC to 1MHz
 Max. Voltage: +/- 35V

LCR-08

Patent:188540



Description:
 SMD / clip tweezers
 Frequency: DC to 1MHz
 Max. Voltage: +/- 35V

LCR-09

Patent:186171



Description:
 SMD / chip test fixture
 Frequency: DC to 1MHz
 Max. Voltage: +/- 35V
 Size range from 0603 to 1812

LCR-13

Patent:186171



Description:
 SMD / chip test fixture
 Frequency: DC to 1MHz
 Max. Voltage: +/- 35V
 Size range from 0201 to 0805



Aparatura
 kontrolno-pomiarowa
www.merazet.pl
facebook.com/merazetsa

KONTAKT

Elektryczna aparatura pomiarowa
 E: aparat-elekt@merazet.pl
 T: +48 61 8644 695, centrala: +48 61 8644 600