





HD52.3D 2 AXES ULTRASONIC ANEMOMETERS

2 axes ultrasonic Anemometers series HD 52.3D....

The instruments of the series HD52.3D... are 2 axes ultrasonic static anemometers for measuring:

- · Wind speed and direction, U-V Cartesian components of wind speed,
- Relative Humidity and Temperature (optional, code '17'),
- Diffuse Solar Radiation (optional, code 'P'),
- Barometric pressure (optional, code '4').

All models are equipped with compass.

RS232, RS485, RS422 and SDI-12 serial interfaces are available with **NMEA**, **MODBUS-RTU** and **SDI-12** communication protocols.

All versions have two analogical outputs, both for wind speed and for direction, factory configurable among $4\div20\text{mA}$ (standard), $0\div1\text{V}$, $0\div5\text{V}$, $0\div10\text{V}$ (to be specified when ordering).

Optionally available, (ACCREDIA) **ILAC-MRA** traceable factory calibration.

Advantages:

- · The absence of moving parts minimizes maintenance;
- High sensitivity for detecting very low speeds, which are not detectable by traditional methods;
- The low power of the instrument allows installation in remote sites, with power from solar panel and battery;
- The heating option 'R' prevents the accumulation of snow and ice from forming, allowing accurate measurements in all environmental conditions;
- Fast and easy installation (on 40mm diameter pole, optional installation kit HD2004.20), alignment facilitated by built-in compass;
- The available measurement options join together in one single, compact and lightweight instrument, the main variables of interest in weather stations;
- . MODBUS-RTU output allows instrument networking.


Typical applications:


- · Weather stations
- · Environmental monitoring
- Agriculture
- · Sports facility
- · Marine and Harbour applications
- Airports
- HVAC
- Construction
- · Renewable energy
- · Building automation

Technical specifications:

Wind speed	
Employed sensor type	Ultrasonic
Measuring Range	060 m/s
Resolution	0.01 m/s
Accuracy	Whichever is greater \pm 0,2 m/s or \pm 2%, (035 m/s) \pm 3% (> 35 m/s)
Wind direction	
Employed sensor type	Ultrasonic
Measuring Range	0360°
Resolution	0.1°
Accuracy	± 2° RMSE from 1.0 m/s
Compass	
Employed sensor type	Magnetic
Measuring Range	0360°
Resolution	0.1°
Accuracy	± 1°
Air temperature (option 17 is requested)	
Employed sensor type	Pt100
Measuring Range	-40+60 °C
Resolution	0.1 °C
Accuracy	± 0.15 °C ± 0.1 % of the measure
Relative Humidity (option 17 is requested)	
Employed sensor type	Capacitive
Measuring Range	0100%RH
Resolution	0.1%
Accuracy (@ T = 1535 °C)	± 1,5%UR (090%RH), ± 2%RH (remaining field)
Accuracy (@ T = -40+60 °C)	± (1,5 + 1,5% of the measure)%RH
Barometric Pressure (option 4 is requested)	
Principle Piezoresistive	
Measuring Range	6001100 hPa
Resolution	0.1 hPa
Accuracy	± 0.5 hPa @ 20°C
Solar Radiation (option P is requested)	
Employed sensor type	Thermopile
Measuring Range	02000 W/m ²
Resolution	1 W/m ²
Accuracy	2 nd class Pyranometer
General features	
	1030 Vdc
Power supply Power Consumption	26mA @ 12Vdc without heater, 6W with heater
Serial Outputs	RS232, RS485, RS422 and SDI-12
Communication Protocols	NMEA, MODBUS-RTU, SDI-12
Communication Protocols	
Analog Outputs	2 analog outputs for wind speed and direction. Output type to be specified when ordering among 420mA (standard), 01V, 05V and 010V (option 010V requires power supply 1530Vdc)
Electrical connection	male connector M23 19 poles
Working temperature	-40+60 °C
Dimensions	H=179mm, Ø =150mm (HD52.3D, HD52.3D4) H=200mm, Ø =150mm (HD52.3DP, HD52.3DP4) H=336mm, Ø =150mm (HD52.3D17, HD52.3D147) H=357mm, Ø =150mm (HD52.3DP17, HD52.3DP147)
Weight	about 1 Kg (full version, HD52.3DP147)
Housing	Plastic material: LURAN®S (ASA) Metallic parts made of AISI 316
Protection degree	IP66
- 1	



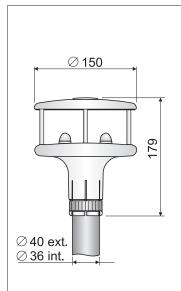

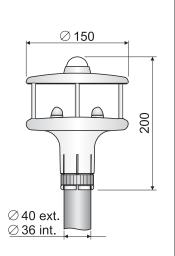

HD 52.3D

Wind speed and direction.

Wind speed, wind direction and barometric pressure.


Ø 150

HD 52.3DP

Wind speed, wind direction and solar radiation.

Wind speed, wind direction, solar radiation and barometric pressure.

HD 52.3DP4

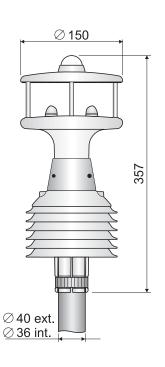

Ø 36 int.

HD 52.3D17

Wind speed, wind direction, temperature and relative humidity.

Wind speed, wind direction, temperature, relative humidity and barometric pressure.

HD 52.3DP17

Wind speed and direction, solar radiation, temperature, relative humidity.

HD 52.3DP147

Wind speed, wind direction, solar radiation, temperature, relative humidity and barometric pressure.

ORDERING CODES

HD 52.3D \mathbf{R} = heater option Blank = not heated P = solar radiation option (pyranometer) 4 = barometric pressure option 17 = relative humidity and temperature option P4 = solar radiation and barometric pressure option P17 = solar radiation, relative humidity and temperature option 147 = barometric pressure, relative humidity and temperature option

Analog outputs for wind speed and direction: 4...20mA standard; to be requested: 0...1V, 0...5V or 0...10V (0...10V option requires power supply 15...30Vdc).

humidity and temperature option

P147 = solar radiation, barometric pressure, relative

No characters = basic version: wind speed and direction

HD52.3D...: 2 axes ultrasonic static anemometers for the measure of wind speed and direction, U-V Cartesian components of wind speed, relative humidity and temperature (optional), diffuse solar radiation (optional) and barometric pressure (optional). A compass is supplied. RS232, RS485, RS422 and SDI-12 serial outputs, NMEA, MODBUS-RTU and SDI-12 communication protocols. Two analogical outputs, for wind speed and direction, factory configurable among 4÷20mA (standard), $0 \div 1V$, $0 \div 5V$ or $0 \div 10V$ (to be specified when ordering). Heater option is available. Power supply: 10...30Vdc (15...30Vdc for 0÷10V analog outputs). Installation on a pole: external Ø 40mm and internal Ø 36mm. Input with M23 19pin male connector and M23 19-pin female flying connector. Optional 5m or 10m cable with a connector on one side and open wires on the other.











HD2004.30: 80W monocrystalline solar pannel. Dimensions 1200 x 530 x 34 mm. Model MD5000080 – CS EVOLUTION.

HD32.35: Outdoor-box for complete weather station acquisition system. Material:

AISI 304 stainless steel. Screen to protect the box from solar radiations. Powder-coated, anodized aluminium white colour. Double lock, one with a key. Dimensions: 450 x 300 x 210 mm. Protection degree: IP66. Equipped with the accessories to mounting on a mast diameter 36 ÷ 52 mm. Provided for 100÷240Vac mains power supply, includes: HD32MT.1 datalogger, power supply unit AC / DC with battery charger, rechargeable 12V battery, surge protection, breakers, power distribution terminals and connectors for connection to external sensors.

HD32.35FP: Outdoor-box for complete weather stations acquisition system. Material: AISI 304 stainless steel. Screen to protect the box from solar radiations. Powder-coated, anodized aluminium white colour. Double lock, one with a key. Dimensions: 450 x 300 x 210 mm. Protection degree: IP66. Equipped with the accessories to mounting on a mast diameter 36 ÷ 52 mm. For power supply by solar panel, includes: HD32MT.1 logger, solar panel charge controller, and power distribution terminal block connectors for connection to external sensors.

HD32.36: Outdoor-box for complete weather stations acquisition system. Material:

Polyester reinforced with hot-moulding Fiberglass. Screen to protect the box from solar radiations. Powder-coated, anodized aluminium. White colour. Key lock. Dimensions: 415 x 310 x 170 mm. Protection degree: IP66. Equipped with the accessories to mounting on a mast diameter 36 ÷ 52 mm. Provided for 100÷240Vac mains power supply, includes: HD32MT.1 datalogger, power supply unit AC / DC with battery charger, rechargeable 12V battery, surge protection, breakers, power distribution terminals and connectors for connection to external sensors.

HD32.36FP: Outdoor-box for complete weather stations acquisition system. **Material: Polyester reinforced with hot-moulding Fiberglass.** Screen to protect the box from solar radiations. Powder-coated, anodized aluminium. White colour. Key lock. Dimensions: 415 x 310 x 170 mm. Protection degree: IP66. Equipped with the accessories to mounting on a mast diameter 36 ÷ 52 mm. For power supply by solar panel, includes: HD32MT.1 logger, solar panel charge controller, and power distribution terminal block connectors for connection to external sensors.



HD 32.35