

FEATURES

SENTRONIC^{PLUS} is a highly dynamical 3-way proportional valve with digital control.

SENTRONIC^{PLUS} stands for:

- Digital communication and control
- Direct operated valve
- Dynamic behaviour (high speed)

A special feature of the **SENTRONIC^{PLUS}** is its *DaS* software supplied for optimum adjustment over PC and viewing of setpoint and feedback signals. Other functions are valve diagnostics, parameter setting and maintenance.

GENERAL

Fluids

Air or neutral gases, filtered at 50 µm, condensate-free, lubricated or unlubricated
G1/8 - G1/4 - G1/2 - G1

Ports

Max. allowable pressure

See table below

Pressure range

See table below

Fluid temperature

0...60 °C

Ambient temperature

0...60 °C

Setpoint - analog

0 - 10 V (impedance 100 KΩ)

0 - 20 mA/4 - 20 mA (impedance 250 Ω)

Hysteresis

± 0,5 % of span

Linearity / pressure measurement

± 0,5 % of span

Repeatability

± 0,5 % of span

EXPLOSION SAFETY

Safety code

Ex II 2D Ex tb IIC T135 °C Db

Ex II 3G Ex nA IIC T4 Gc, 0 ≤ Ta ≤ +50 °C

EC type examination

certificate no.:

IBExU07ATEX1173

CONSTRUCTION

Body

Direct operated poppet valve

Internal parts

See table below

Seals

Stainless steel and brass

FPM and NBR

ELECTRICAL CHARACTERISTICS

nominal diameter DN	stabilised voltage *	max. power (W)	max. current (mA)	insulation class	degree of protection	electrical connection
3	24 V = 24 V = +/-10%	12	500	F	IP65	5-pin M12 connector or 7-pin DIN connector
6		24 ²⁾	1000 ²⁾			
12		34	1400			
20		44	1800			

* Max. ripple: 10 %

SPECIFICATIONS

pipe size	orifice size (mm)	flow	
		coefficient Kv (Nm ³ /h)	at 6 bar (l/min - ANR)
G 1/8	3	0,18	210
G 1/4	6	0,60	700
G 1/2	12	1,20	1400
G 1	20	4,80	5600

CATALOGUE NUMBER

6 1 4 3 5 7

B A S I D P P

B: CONTROL PANEL

D = M12 with display - non-explosionproof

E = M12 without display - explosionproof (ATEX)

F = DIN connector, 7-pin, with display - non-explosionproof

G = DIN connector, 7-pin without display - non-explosionproof

A: VERSION (ports), body

0 = DN6 (G 1/4), Alu

7 = DN3 (G 1/8), Brass

1 = DN12 (G 1/2), Alu

8 = DN6 (G 1/4), Brass

2 = DN20 (G 1), Alu

9 = DN3 (NPT 1/8), Brass

4 = DN6 (NPT 1/4"), Alu

A = DN6 (NPT 1/4"), Brass

5 = DN12 (NPT 1/2"), Alu

C = DN6 (G 1/4), St. steel

6 = DN20 (NPT 1"), Alu

H = DN6 (G 1/4), Brass²⁾

S: SETPOINT

0 = 0 ... 10 Volt

1 = 0 ... 20 mA

2 = 4 ... 20 mA

I: FEEDBACK

1 = Feedback output 0 ... 10 Volt

2 = Feedback output 0 ... 20 mA

3 = Feedback output 4 ... 20 mA

4 = Feedback input 0 ... 10 Volt

5 = Feedback input 0 ... 20 mA

6 = Feedback input 4 ... 20 mA

PP: PRESSURE RANGE

Max. allowable

Relative pressure pressure (bar) Vacuum (relative)

40 = 0 - 100 mbar

V1 = 0 ... -1 bar

50 = 0 - 500 mbar

shut-off valve

60 = 0 - 1 bar

(vacuum at port 3)

02 = 0 - 2 bar

V2 = 0 ... -1 bar

03 = 0 - 3 bar

bypass version

05 = 0 - 5 bar

V3 = 0 ... -1 bar

06 = 0 - 6 bar

shut-off valve

10 = 0 - 10 bar

(vacuum at port 1)

12 = 0 - 12 bar

16 = 0 - 16 bar¹⁾

20 = 0 - 20 bar¹⁾

3H = 0 - 30 bar²⁾

5H = 0 - 50 bar²⁾

D: DIGITAL OUTPUT

1 = Pressure switch output


PNP ± 5 %

Notes:

¹⁾ Only for DN3 and DN 6

²⁾ Only for DN6, brass / 1,8 A 44 W

Other versions available on request.


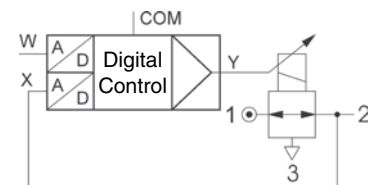


DIMENSIONS (mm), WEIGHT (kg)





G 1/8

Weight: 0,550 kg

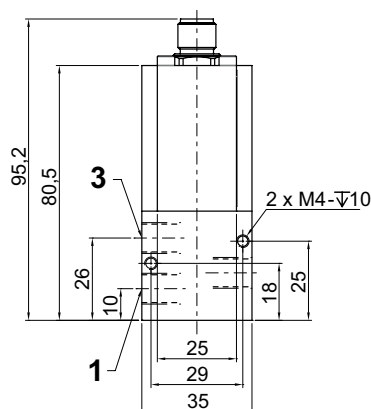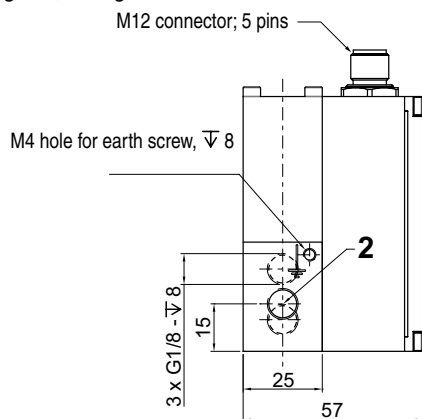



G 1/4

Weight: 0,850 kg aluminium / 1,540 kg brass

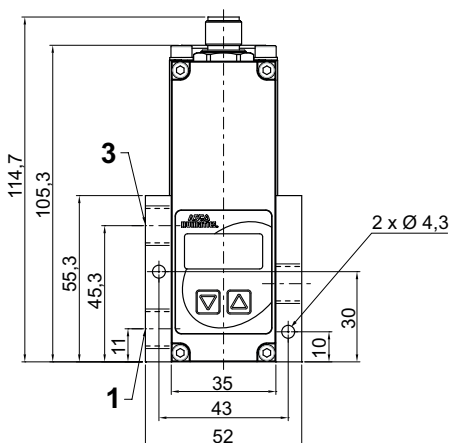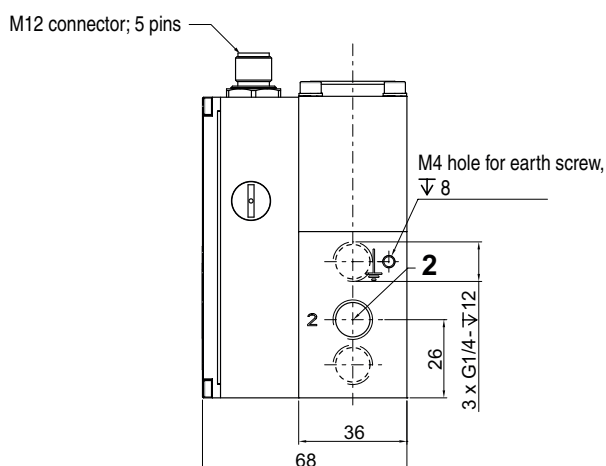

G 1/2


Weight: 1,650 kg

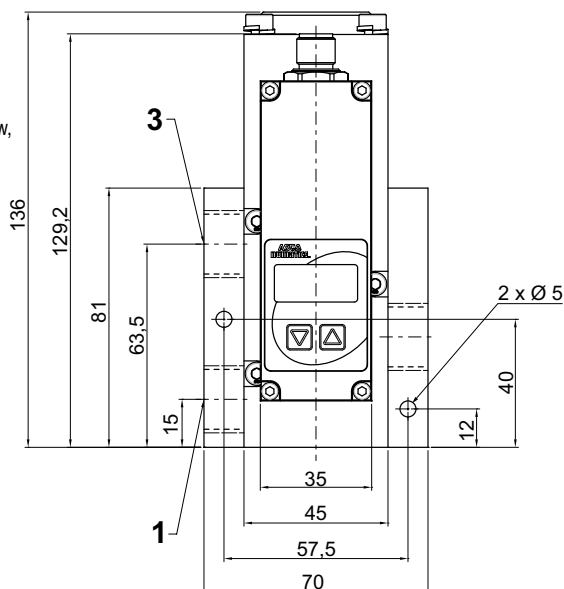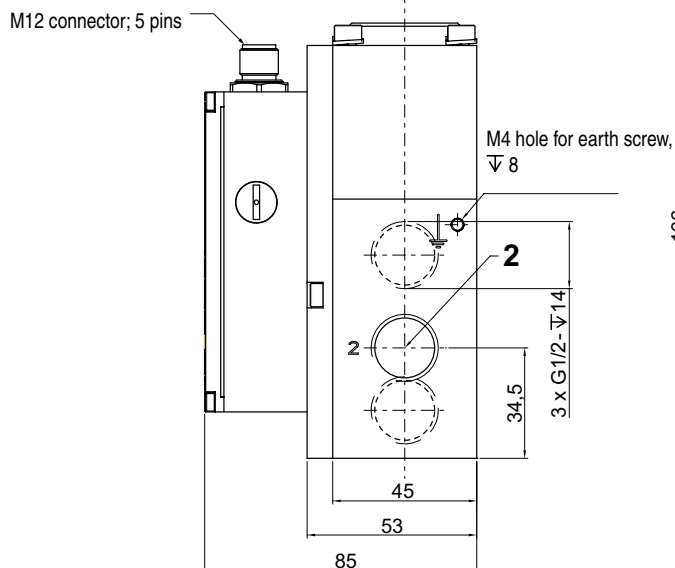

DIMENSIONS (mm), WEIGHT (kg)


G 1

Weight: 3,400 kg

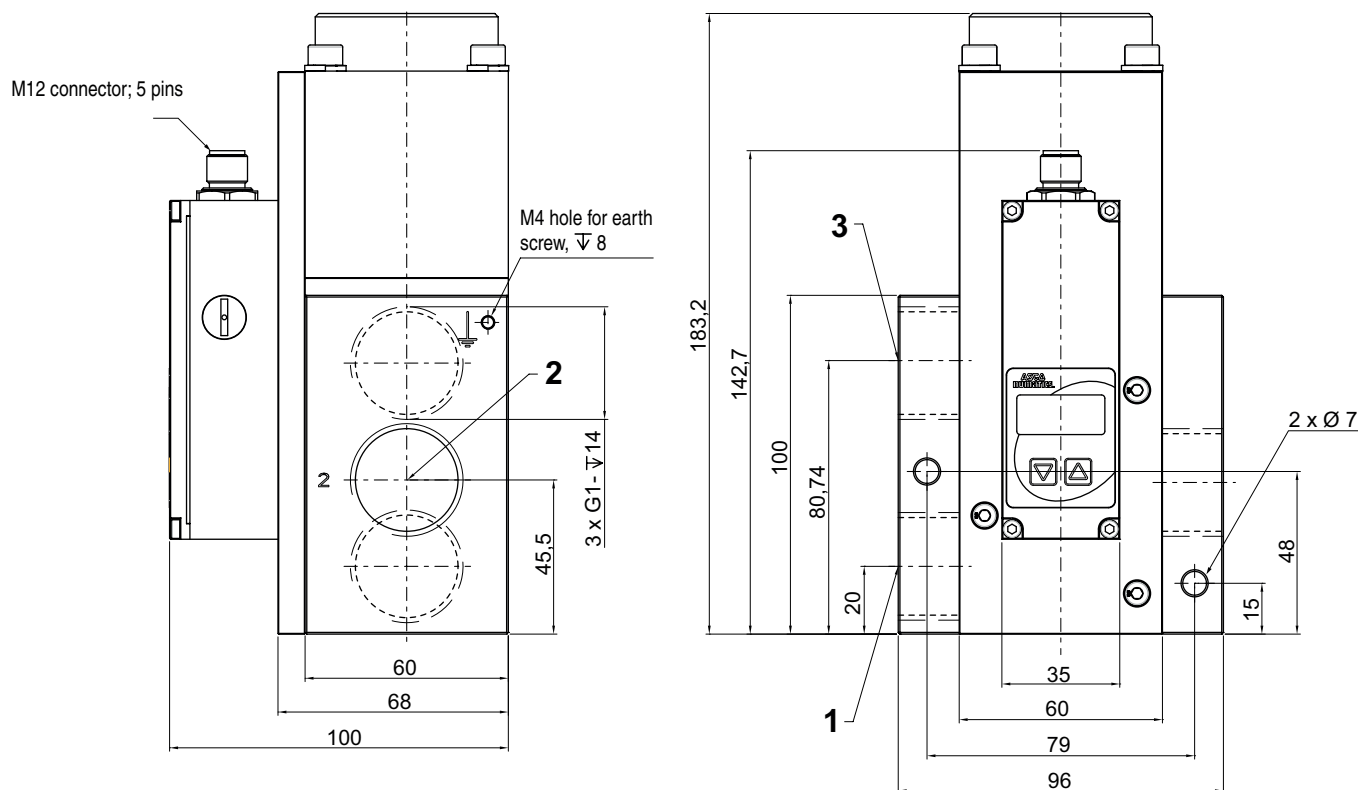

C

CONNECTOR PINNING / CABLE WIRING




Pin	Description	5-wire cable (2 m)	6-wire cable (5 m, 10 m)
1	24 V voltage supply	brown	brown
2	Analog setpoint input	white	white
3	Supply ground	blue	green
	Analog ground *	-	yellow
4	Analog output (Feedback)	black	pink
5	Digital output (Pressure switch)	grey	grey
Body	EMC screen	shield	shield

*) A 6-wire cable with separate analog ground is used for cable lengths over 2 m to set off the voltage drop for the setpoint.

DIMENSIONS (mm), WEIGHT (kg)


G 1/8

Weight: 0,550 kg

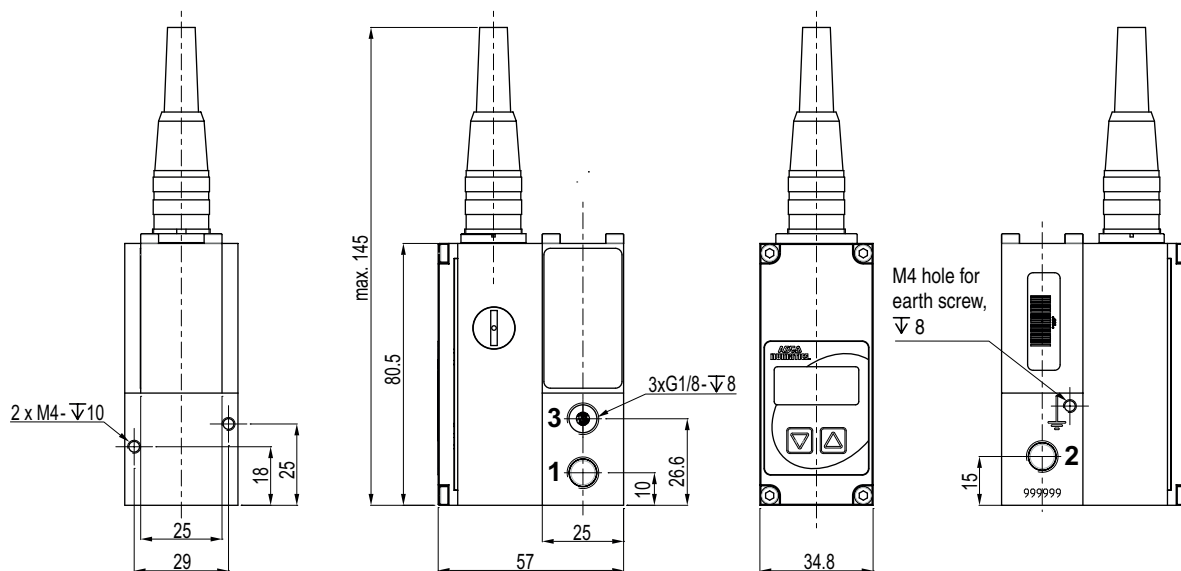

G 1/4

Weight: 0,850 kg aluminium / 1,540 kg brass

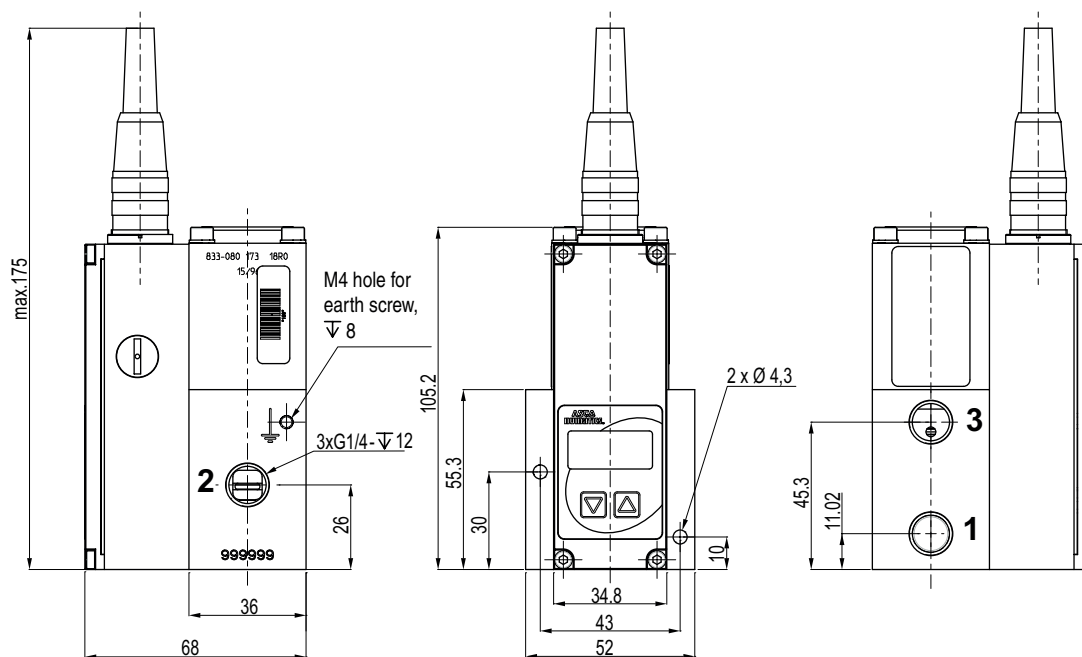


DIMENSIONS (mm), WEIGHT (kg)




G 1/2

Weight: 1,650 kg

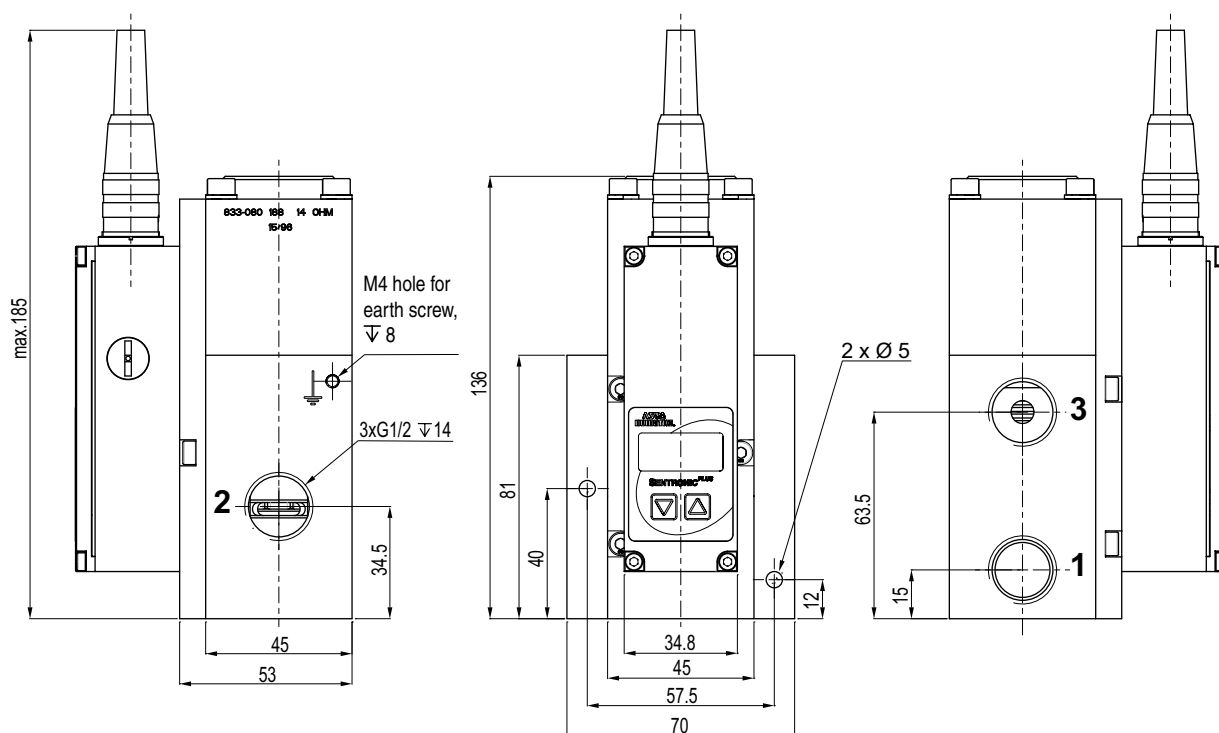

G 1

Weight: 3,400 kg

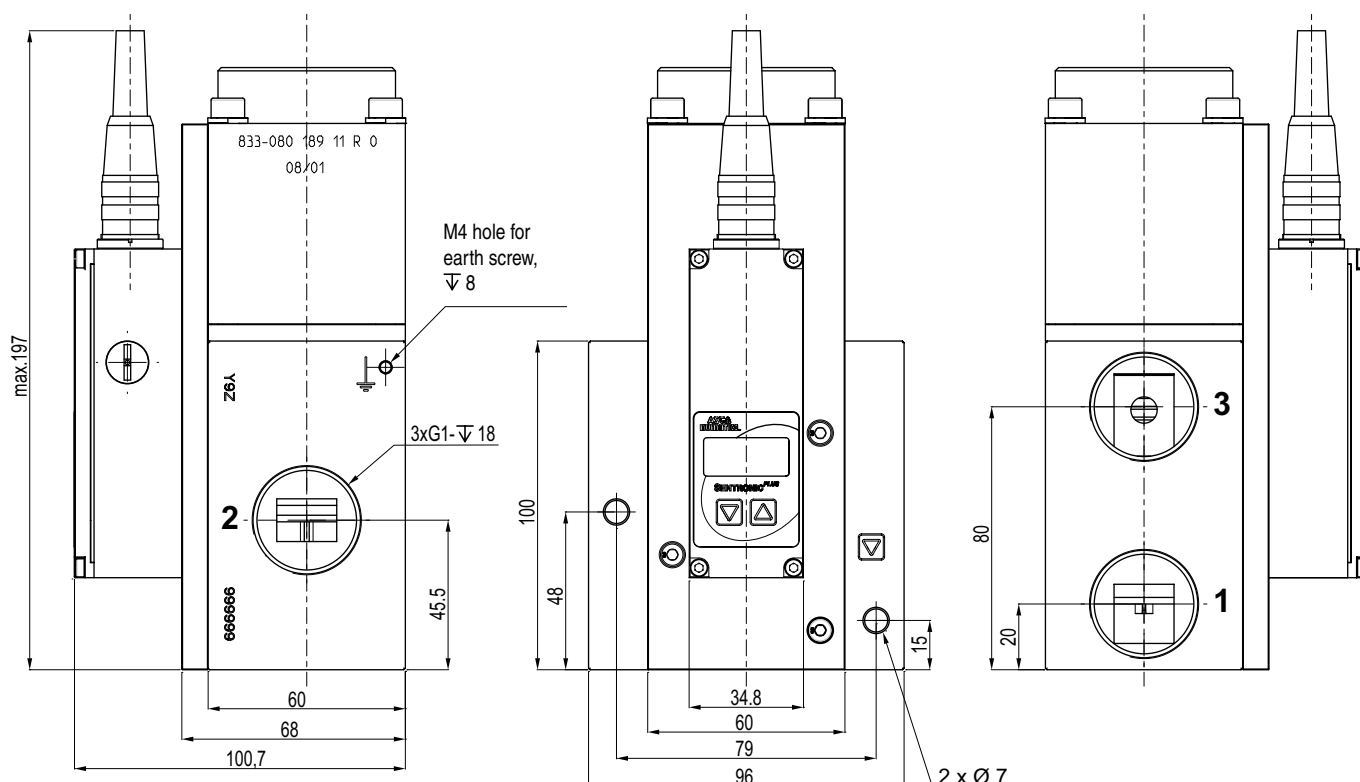

ACCESSORIES

description	catalogue number
Straight M12 female connector, 5 pins, with screw terminals	88100256
Right-angle M12 female connector, 5 pins, with screw terminals	88100725
Supply cable 2 m; 5x0,25 mm ² ; straight connector	88100726
Supply cable 2 m; 5x0,25 mm ² ; right-angle connector	88100727
Supply cable 5 m; 6x0,50 mm ² ; straight connector	88100728
Supply cable 5 m; 6x0,50 mm ² ; right-angle connector	88100729
Supply cable 10 m; 6x0,50 mm ² ; straight connector	88100730
Supply cable 10 m; 6x0,50 mm ² ; right-angle connector	88100731
RS 232 cable converter; 2 m cable with 9-pin Sub-D (plug connector)	88100732
RS 232 cable converter; 2 m cable with 9-pin Sub-D (screw connector)	88100970
DaS Light: Data Acquisition Software for SENTRONIC^{PLUS} - basic parameters - CD-ROM	99100110
DaS Expert: Data Acquisition Software for SENTRONIC^{PLUS} - full parameters - CD-ROM	99100111