


Computer workshop

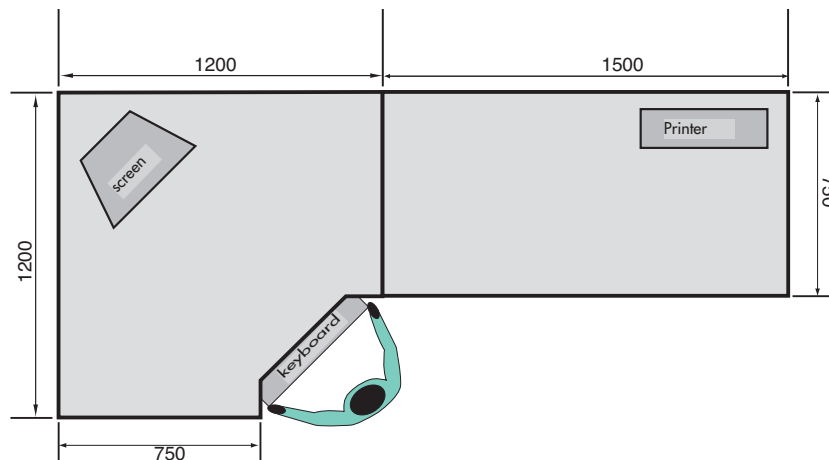

This bench opens up a wealth of possibilities for expanding access to computer workshops, thanks to the large space available on the bench-top. Its standard supplied equipment, which is described below, can be modified on simple request. Its L-shape means that it is highly ergonomic. It is reversible; the return can be positioned either on the left or on the right.

COMPONENTS AND FEATURES OF STATION

- 2 high-temperature stratified tops
 - Separable corner and return
 - PVC edges
 - Thickness of 40mm
- A "cage"-type CPU tower holder with anti-theft bar at the front.
- A sliding keyboard/mouse holder in the corner
- 1 complete stand consisting of:
 - Two single H-shaped legs, 2250mm apart
 - Vertical support leg under bench-top
 - Footrest bar
- Epoxy paintwork

MADE TO MEASURE



ref. TSV-30 **Vert**

ref. TSO-30 **Orange**

Computer hardware not supplied

EQUILIBRIUM RANGE

New generation of technical furniture

Quality of steel & finishes



All parts of the metal frame are manufactured from electrogalvanised steel sheet, which is widely used in the car manufacturing industry and makes the sheet extremely resistant to corrosion. The iron/zinc combination forms a natural cell with moisture in the air that prevents the iron from corroding, even if shearing or scratching occurs. This protection is strengthened further by two layers of furnace-baked epoxy paint, which means that it is suitable for use even in tropical or coastal areas.

RAL 2008

Colour Chart

RAL 6018

Products shown in this

RAL 1021

catalogue, especially

RAL 3003

workbenches, can be

RAL 5017

supplied in the colours

RAL 7016

given here. All other RAL

RAL 7035

available upon request.

Quality of stratified top



SHOCK
RESISTANT



ABRASION
RESISTANT



SCRATCH
RESISTANT



CHEMICAL
RESISTANT



EASY
TO CLEAN




Uniformly
distributed

Thickness of 40mm



High quality stratified layer. High heat resistance (up to 300°C without modification in shape, colour). High resistance to scratches

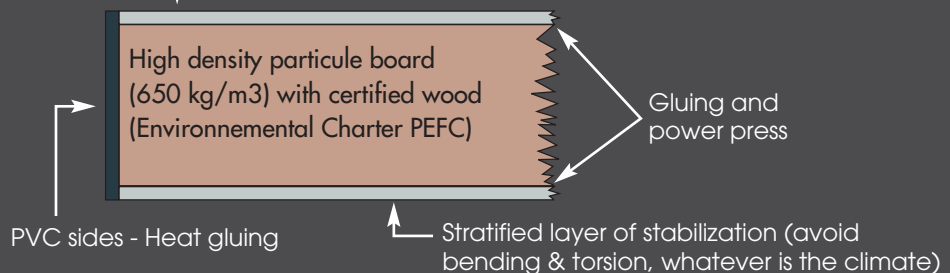

Power sockets available for technical furniture



F TYPE SCHUKO
GERMANY



E TYPE
FRANCE



J TYPE
SWITZERLAND



G TYPE
UNITED KINGDOM



B TYPE
USA