

3-PHASE VERTICAL CONSOLE



A

2

1 + 3

4

A. "THREE-PHASE SUPPLY"
A lamp indicating that the power is on.
Output via 4 safety terminals.
Protection by thermal magnetic circuit breaker (30mA residual circuit breaker available as an option). Key-operated power-on switch

1. "EMERGENCY STOP"
This push button cuts off the power in the case of an emergency. Key-resettable (positive safety).

2. 24VAC INSULATED SUPPLY.
Output via 2 safety terminals. Primary winding of transformer protected by auto-protection and secondary wiring by circuit breaker and switch.

3. GENERAL "START/STOP".
- A lamp indicating that the power is on.
- Start/stop operated using a double push-button.

4. 230VAC MAINS DISTRIBUTION
Two power sockets 230V with lamp.

ref. LAG-PT

BENCH WITH STRATIFIED TOP




Highly-resistant and high-temperature stratified top.
Dim. 1500 x 750mm
Height of table top: 840mm

ref. ASO-157

ref. ASV-157

GRID HOLDER FRAME (BARE WITHOUT GRID)

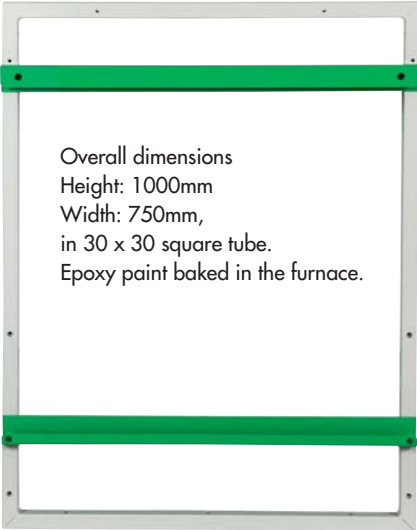

Overall dimensions
Height: 1000mm
Width: 750mm,
in 30 x 30 square tube.
Epoxy paint baked in the furnace.

This frame can accommodate any type of grid up to a size of 800 x 750mm.

It is fitted with a lower rail, which can be adjusted in steps, and an upper rail, which slides up and down the vertical shafts.

The system has been designed in such a way that you can remove the wired grids without moving the rails.

ref. CSO-10

ref. CSV-10

SINGLE-PHASE VERTICAL CONSOLE



B

3

1

2

4

B. GENERAL PROTECTION
Protection by magneto-thermal circuit breaker (30mA residual current circuit breaker available as an option)

1. "EMERGENCY STOP".
This push button cuts off the power in the case of an emergency. Key-resettable (positive safety).

2. 24VAC INSULATED SUPPLY.
Output via 2 safety terminals. Primary winding of transformer protected by auto-protection and secondary wiring by circuit breaker and switch.

3. "START/STOP".
- A lamp indicating that the power is on.
- Start/stop operated using a double push-button.

4. 230VAC MAINS DISTRIBUTION.
Two power sockets 230V with lamp.

ref. LAG-PM

ECONOMICAL SINGLE-PHASE CONSOLE




Horizontal console (wired), ready to be connected to the mains with:

- A 24VAC output insulated from the mains with LED indicator lamp, 100VA, protected by its own circuit breaker and start/stop button
- Two power sockets 230V with LED indicator lamp
- An emergency stop with key + an On/Off button
- Total length 750mm
- Drilling on the back side for fastening on grid holder frame (ref. CSO/CSV)
- Only available in grey colour
- Steel sheet case, PVC front panel

ref. PUG-1

REMOVABLE GRIDS

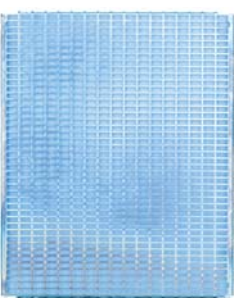

REF	PA6040	PA6050	PA7050
Height	660	660	765
width	434	534	534

EXAMPLES OF WIRING BENCHES

CHARACTERISTICS	REF.	QTY	QTY	QTY	QTY
Bench	ASO-157 or ASV-157	1	1	1	1
Vertical 3-phase console	LAG-PT	2			
Vertical single-phase console	LAG-PM		2		
Horizontal single-phase console	PUG-1			2	
Universal bare frame	CSO-10 or CSV-10	2	2	2	2
ref.		LAO-3T	LAO-2M	LAO-ECO	LAO-N
ref.		LAV-3T	LAV-2M	LAV-ECO	LAV-N






ref. LAV-3T



ref. LAO-N




ref. LAV-ECO

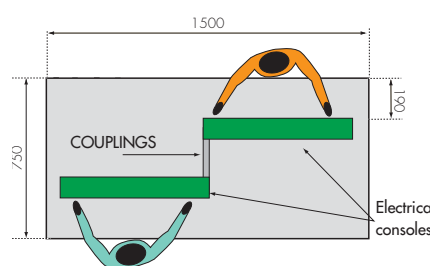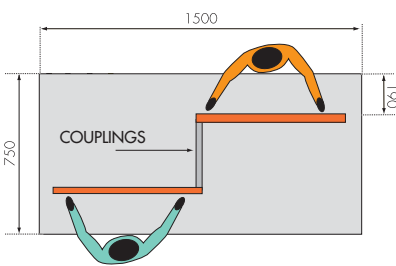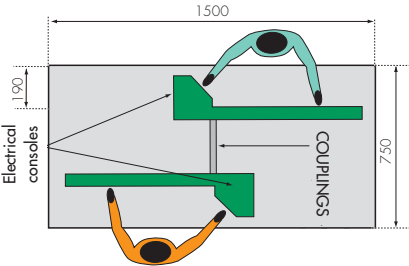

Options
SEE PAGES 40-41



ELECTROPNEUMATIC
BENCH
SEE PAGE 35

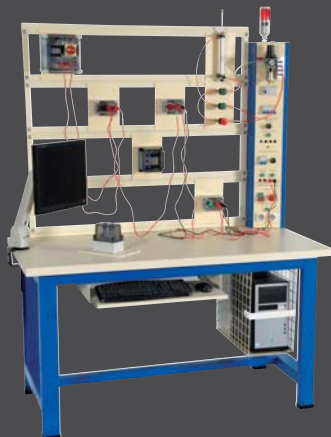


Options for wiring benches of pages 36 to 39

STORAGE UNIT FOR 2 GRIDS

Standard model




High and low guidance.
Compatible with grids
660 x 534mm (PA6050)

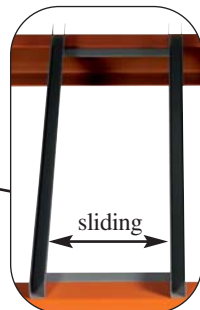

ref. GLS-2

Economical model

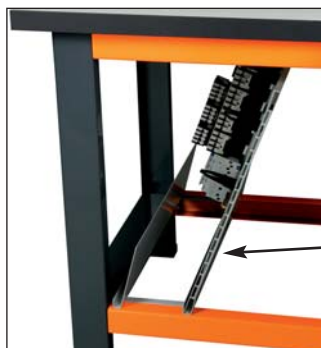

Compatible with grids up to
580 x 750mm max.
(tilted 15° compared to
the vertical)



ref. RAILECO

PNEUMATICS KIT FOR 4mm OUTPUT



A pneumatic distribution can be
fitted on the wiring benches. This
option is delivered complete with
air entry pipe, stop valve,
regulator with filter and manome-
ter, feeder tank with 4 quick-fit
junctions, means of fixing and
screws.

ref. DISLAB

24VDC - 1.8A OUTPUT




Electronic auto-protection.
Safety terminals 4mm
On/off switch
LED indicator light.

ref. CC24L

30mA RESIDUAL CURRENT CIRCUIT BREAKER



A Type

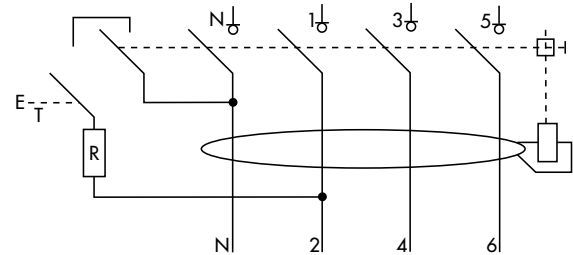


30mA residual current circuit-breaker. Single-phase bench.

ref. DIF30-2L

30mA residual current circuit-breaker. 3-phase bench.

ref. DIF30-4L

CIRCUIT CONTINUITY TEST

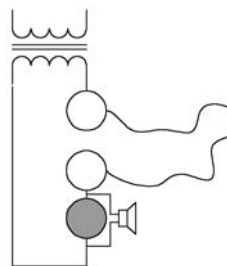

An optional circuit "Continuity test" is available.
This option allows to do some acoustic and
visual tests under 24VAC.

ref. CAV

360° LED LAMP



Replace your old lamps by some new hard-wearing LED lamps

- LED lamp with ten electroluminescent LED diodes without maintenance.
- Bulb with a bayonet fitting
(B15D type), 2 contact terminals
- Available in 2 voltages:
230VAC and 24VAC

ref. T15-230

230V

ref. T15-24

24V



VERTICAL CABLE RACEWAY



For the wiring of the power
cable from the aerial wiring
system to the top of upright
supply console

ref. LABO-CANNE

360° LIGHT SIGNAL TOWERS



ref. VOY61



ref. VOY121



ref. VOY181

THEY CAN BE SEEN THROUGH 360°. CAN BE PLACED EITHER ON THE CONSOLE OR ON A VERTICAL CABLE RACEWAY. STANDARD COLOURS: RED, GREEN, YELLOW. OTHER COLOURS: WHITE AND BLUE

COLOURS AVAILABLE UPON REQUEST

HARD WEARING LED LAMP

white - orange - red - green - blue



HANGING DRAWERS (300 SERIES) WITH LOCK AND KEY

For top in depth 750 mm or 1000 mm - Height: 400 mm - Width: 450 mm

REF	Drawer H=100mm	Drawer H=200mm	Drawer H=300mm
TIG-30	3	/	/
TIG-32	1	1	/
TIG-33	/	/	1



Ref. TIG-30



Ref. TIG-32

HANGING DRAWERS (400 SERIES) WITH LOCK AND KEY

For top in depth 750 mm or 1000 mm - Height: 400 mm - Width: 450 mm

REF	Drawer H=100mm	Drawer H=200mm	Drawer H=300mm
TIG-40	4	/	/
TIG-41	2	1	/
TIG-42	/	2	/
TIG-43	1	/	1



Ref. TIG-41



Ref. TIG-42

HANGING DRAWER WITH LOCK AND KEY

For top in depth 750 mm or 1000 mm
Height: 100 mm - Width: 400 mm

ref. TIG-10




FAST CONNECTIONS

These items are sold separately.


They allow the quick connection/disconnection of 10 contact points.

The female base can be fastened on rail, the male connector is movable.

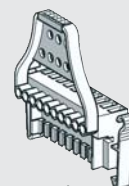


Male connector
10 points, movable

ref. AB1-M

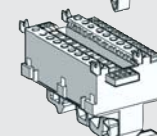

Female base
10 points, for rail

ref. AB1-F

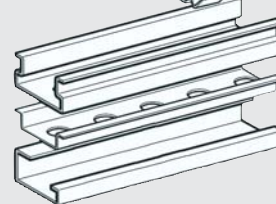

Maximum section: 2.5 mm²

Maximum current: 10A

Maximum voltage between contacts:

380 V AC

MADE TO MEASURE

EXAMPLES OF PRODUCTS MADE TO MEASURE
FOLLOWING THE CUSTOMERS NEEDS

